


- 1.Join fixture safety cables with safety cable from ceiling.
- 2.Wrap both safety cable around the cable lock nut.
- 3.Insert screws into both holes on cable lock nut,secure screws with screwdriver.
- 4.Push the cable lock nut into outlet box.

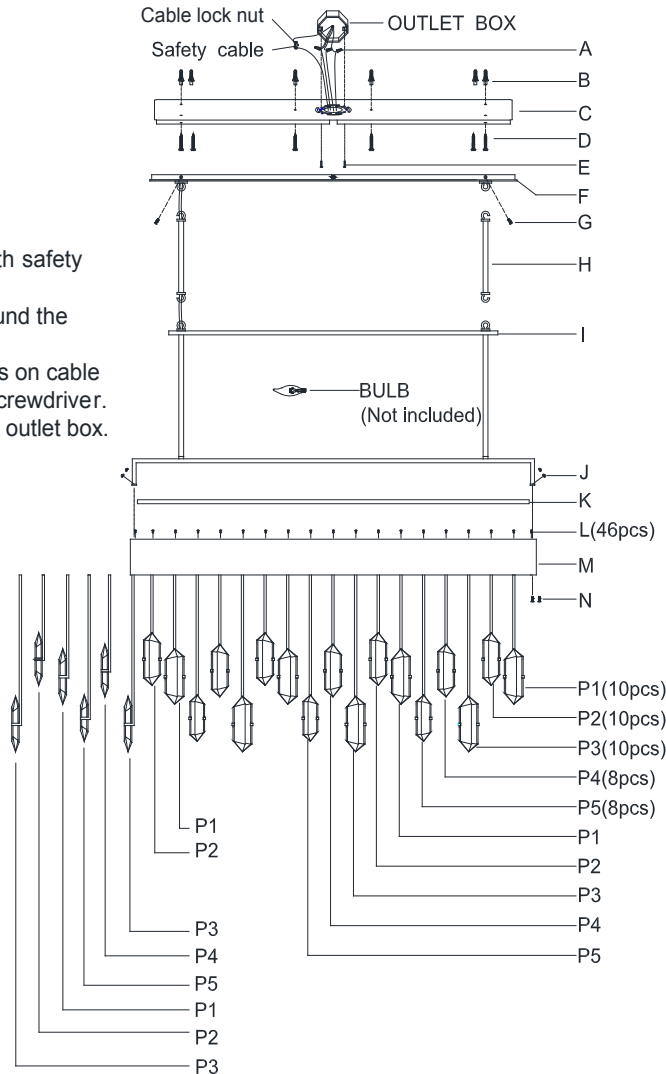

Item # KW 5098


WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

1. Carefully remove all parts from the box.
 2. Remove the mounting plate (C) from the canopy (F) by loosening the side screws (G).
 3. Drill 6 holes on the ceiling and make sure the distance will match to the holes in the mounting plate (C) exactly.
 4. Knock the anchors (B) into the ceiling hole.
 5. Install the mounting plate (C) to the outlet box by mounting screws (D) and (E) provided.
 6. Let rod (H) one end hang to canopy (F) and other end hang to center plate (I).
 7. Cut the cord and ground wire about 10" length beyond the canopy.
 8. Connect the fixture ground (bare) wire with the ground wire from the outlet box using wire nut (A). If your house does not have ground wire, then attach this wire to the green grounding screw inside of the outlet box.
- IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
9. Connect the fixture Neutral wire (ribbed, no markings) with the neutral wire from the outlet box using wire nut (A).
 10. Connect the fixture Hot (smooth edge, markings) wire with the hot wire from the outlet box using wire nut (A).
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
11. Tuck these wire connections neatly into the outlet box to secure.
 12. Attach the canopy (F) to the mounting plate (C) and secure with side screws (G).

- 1.Join fixture safety cables with safety cable from ceiling.
- 2.Wrap both safety cable around the cable lock nut.
- 3.Insert screws into both holes on cable lock nut,secure screws with screwdriver.
- 4.Push the cable lock nut into outlet box.

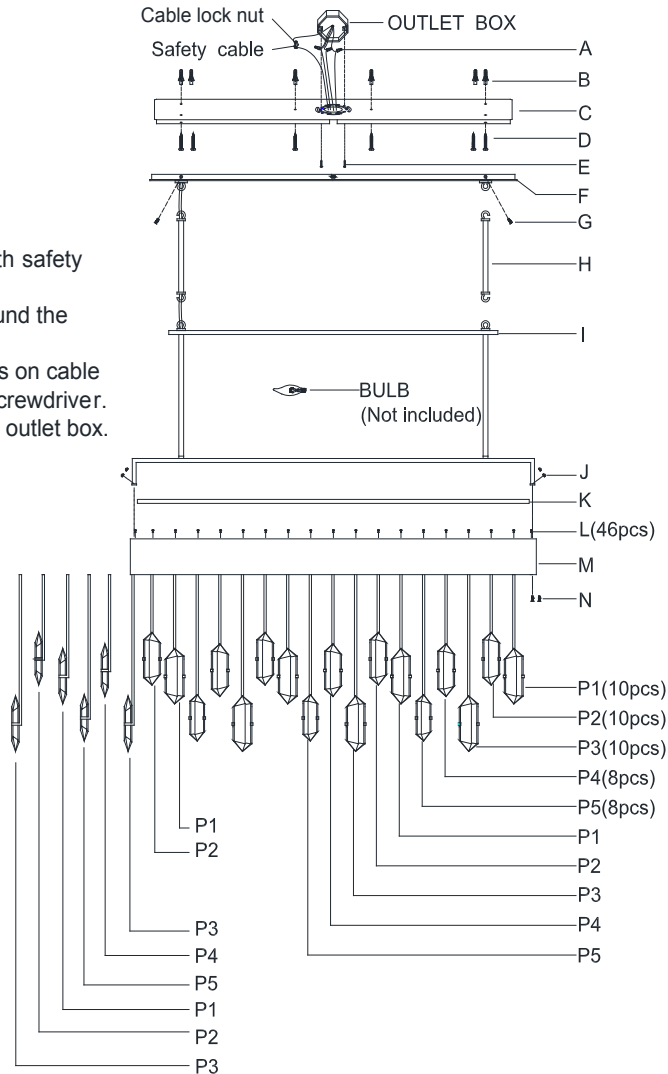

Item # KW 5098

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

INSTALLATION ARE FINAL.

14. Remove the bottom plate (M) from the center plate (I) by loosening the screws (N) and nuts (J).
15. Attach the rectangle glass (K) to the inside of bottom plate (M).
16. Attach the bottom plate (M) to the center plate (I) and secure with screws (N) and cap nut (J).
17. Assembled the drops (P1) & (P2) & (P3) & (P4) & (P5) to the bottom plate (M) and secure with screws (L).
18. Insert bulbs (not included) into the sockets.
19. Installation is complete, turn on power at fuse or circuit breaker.

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.