


ASSEMBLY INSTRUCTIONS

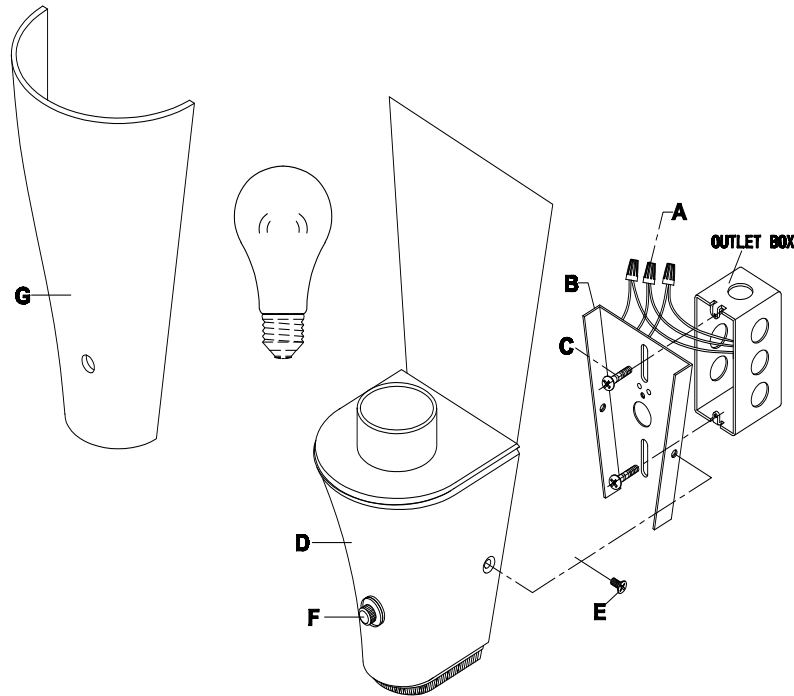

Altare Wide Sconce Item # TOB 2416

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

1. Carefully remove all parts from the box.
2. Remove the mounting plate (B) from the fixture (D) by loosening the side screws (E).
3. Screw off the thumb screw (F) from the fixture (D).
4. Affix the mounting plate (B) to the outlet box by the mounting screws (C).
5. Connect the fixture ground wire (bare) to ground wire from the outlet box using wire nuts (A).
IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
6. Connect the fixture neutral wire (white) to neutral wire from the outlet box using wire nuts (A).
7. Connect the fixture hot wire (black) with hot wire from the outlet box using wire nuts (A).
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
8. Tuck these wire connections neatly into the outlet box to secure.
9. Securing the fixture (D) to the mounting plate (B) by the side screws (E).
10. Insert bulb (not included) into the socket.
11. Install the glass shade (G) into the fixture (D) by thumb screw (F).
12. Installation is complete.

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.



VISUAL COMFORT & Co. Est. 1987