


ASSEMBLY INSTRUCTIONS

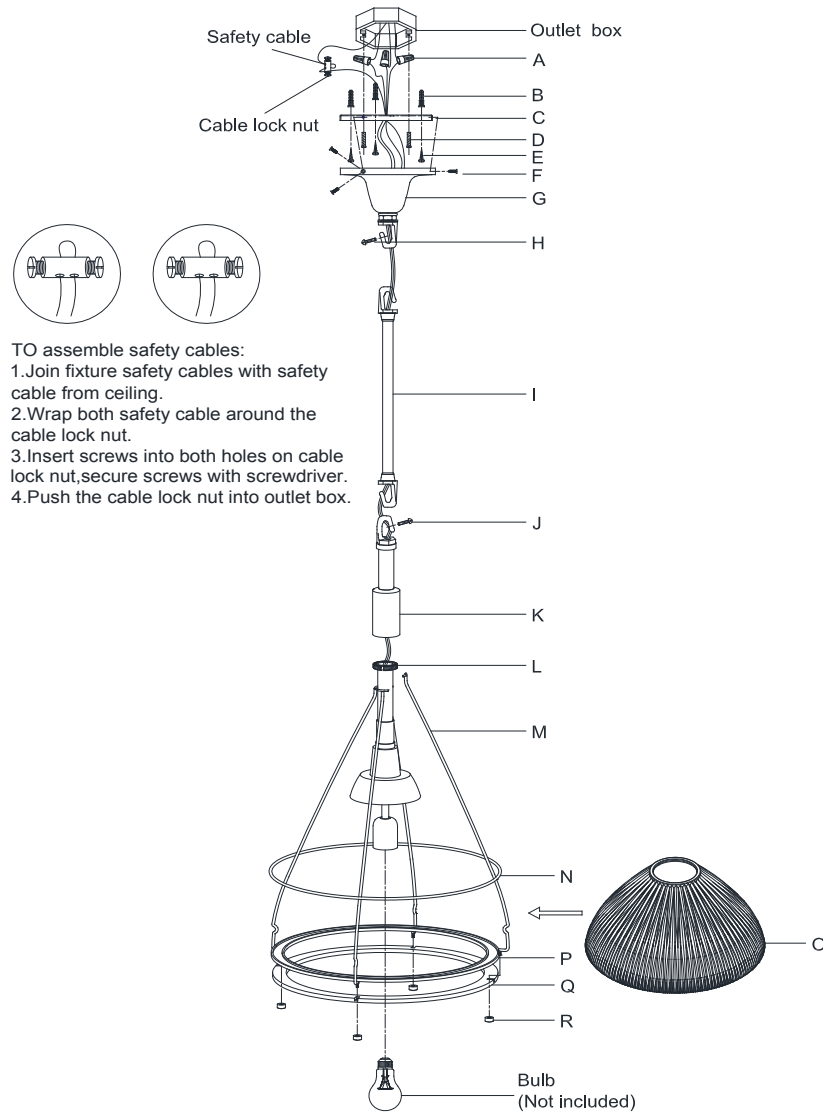

Harris Medium Framed Pendant

Item # TOB 5076

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.


1. Carefully remove all parts from the box.
2. Remove the mounting plate (C) from the canopy (G) by loosening the side screws (F).
3. Drill 3 holes on the ceiling and make sure the hole distance will match to the mounting plate (C) holes.
4. Knock the anchors (B) into the holes on the ceiling.
5. Install the mounting plate (C) to the outlet box and secure with mounting screws (D) & (E).
6. Put the glass shade (O) on the metal plate (P) & (Q), then attach the rods (M) one end to the glass shade (O) and secure with metal ring (N) and finial (R).
7. Attach the other end of the rods (M) to the fixture body (L) and secure with connector (K).
8. Attach the rods (I) one end to the canopy (G), another end to the fixture body and secure with the screws (H) & (J).
9. Cut the power supply wire and ground wire. Be certain to leave enough to connect inside of the outlet box.
10. Connect the fixture ground (bare) wire with the ground wire from the outlet box using wire nut (A). If your house does not have ground wire, then attach this wire to the green grounding screw inside of the outlet box.
11. Connect the fixture Neutral wire (ribbed, no markings) with the neutral wire from the outlet box using wire nut (A).

IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.



VISUAL COMFORT & Co. Est. 1987

ASSEMBLY INSTRUCTIONS

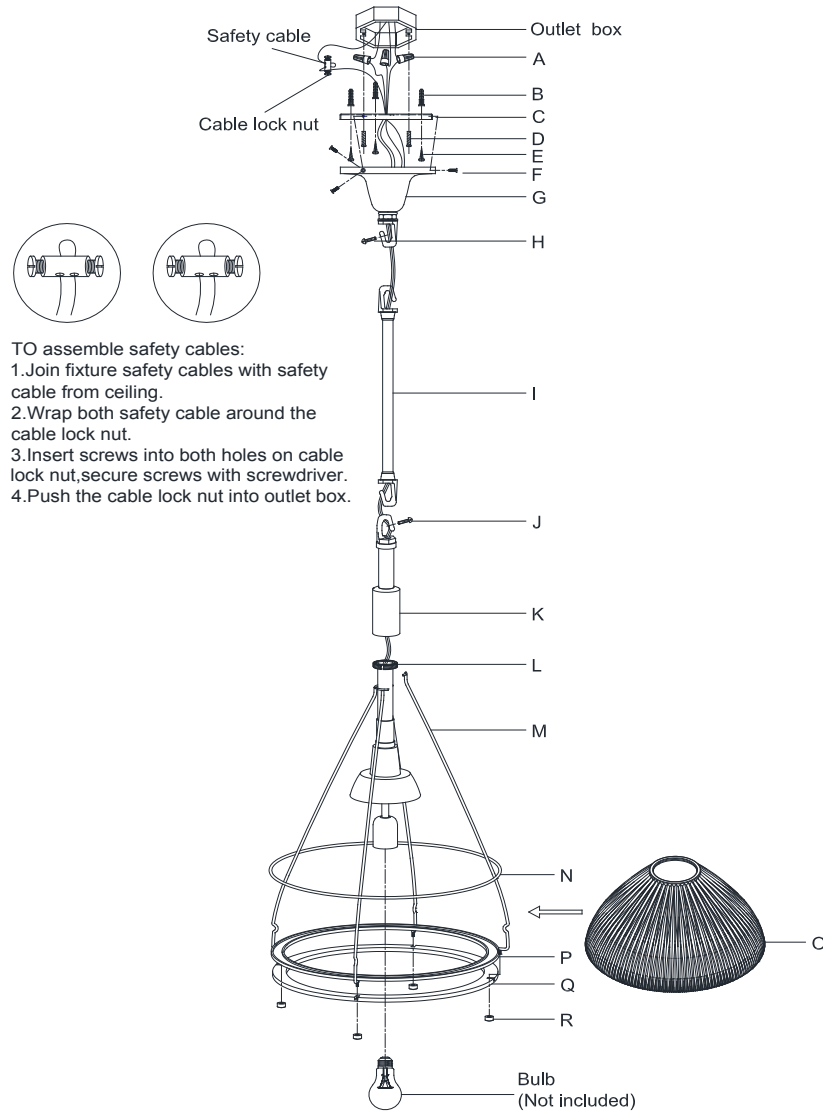

Harris Medium Framed Pendant

Item # TOB 5076

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

12. Connect the fixture Hot wire (smooth edge, markings) with the hot wire from the outlet box using wire nut (A).

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

13. Tuck these wire connections neatly to the outlet box to secure.

14. Put the canopy (G) to mounting plate (C) and secure with side screws (F).

15. Insert bulb (not included) into the socket.

16. Installation is complete, turn on power at fuse or circuit breaker.

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.