


ASSEMBLY INSTRUCTIONS

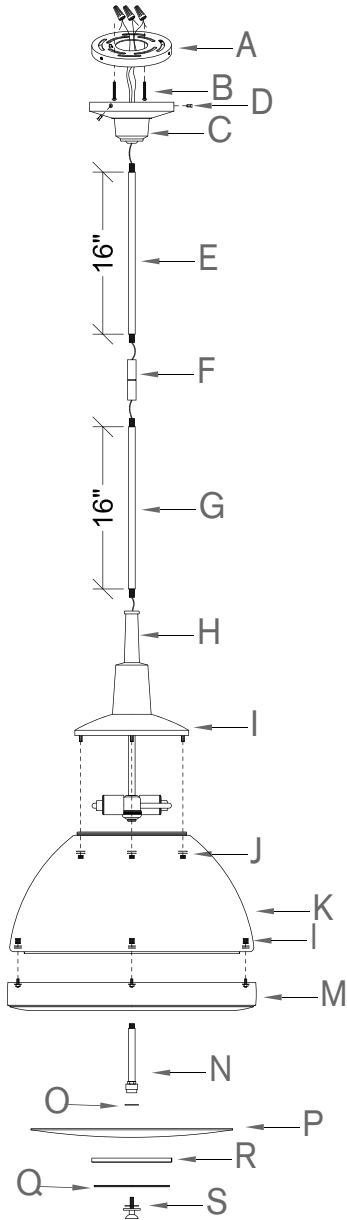

Connor Large Pendant
Item # TOB 5762

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Carefully remove all parts from the carton.
2. Remove nuts (I) from shade cover (M), join shade (K) and shade cover (M) together, letting the nipples on shade cover (M) pass through the bottom hole of shade (K) and secure with nuts (I).
3. Remove nuts (J) from shade cap (I), attach shade (K) with shade cover (M) to shade cap (I), letting the nipples on shade cap (I) pass through the top hole of shade (K) and secure with nuts (J).
4. Insert the specified light bulbs into sockets.
5. Thread rod (N) into the bottom opening of socket assembly.
6. Remove finial (S) from rod (N), attach washer (O), glass cover (P) and disks (R) & (Q) to rod (N) and secure with finial (S).
7. Thread pole (G) into the top opening of (H).
8. Thread connection tube (F) onto top nipple of pole (G).
9. Thread pole (E) into top opening of connection tube (F).
10. Thread pole (E) into bottom opening of canopy (C).
11. Remove mounting plate (A) from canopy (C) by removing canopy screws (D) in counter clockwise direction.
12. Affix mounting plate (A) to ceiling outlet box with mounting screws (B) provided.
13. Attach the bare copper ground wire from the fixture to the ground junction box wire (usually green or copper), fasten together with a plastic wire connector. Tightly wrap the wire connector with electrical tape. Be sure no wire strands are exposed. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
14. Connect neutral wire from fixture (ribbed molded wire) to the neutral wire from the junction box (usually white) . Fasten both wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape. Be sure no wire strands are exposed.
15. Connect the hot wires from the fixture (smooth wire) to the hot wire (usually black) from the junction box. Fasten each together with a plastic wire connector and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.**
16. Attach canopy (C) to affixed mounting plate (A) and secure with canopy screws (D).
17. Installation is completed. Restore power and test fixture.

*** Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.