

Quoizel, Inc.  
6 Corporate Parkway  
Goose Creek, SC  
29445

Customer Service  
Phone 631.273.2700  
Fax 631.231.7102  
www. quoizel. com

## Assembly Instruction Sheet #IS-Q1560BN For Style Q1560BN

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

**Bulb Recommended:** (1) Medium Base 100W Maximum

**Estimated Assembly Time:** 20-30 minutes

**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



### Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

### Package Contents

Part	Description	Quantity
A	Crossbar	1 pc.
B	Mounting Screw	2 pcs.
C	Lock Washer	2 pcs.
D	Hex Nut	2 pcs.
E	Mounting Ball	2 pcs.
F	Fixture Body	1 pc.
G	Harp	1 pc.
H	Finial	1 pc.
I	Shade	1 pc.
J	Self-tapping Screw	5 pcs.
K	Wall Anchor	5 pcs.
L	Cord Cover Backplate	1 pc.
M	Cord Cover	2 pcs.
N	Plug Insert	1 pc.
O	Short Mounting Screw	2 pcs.





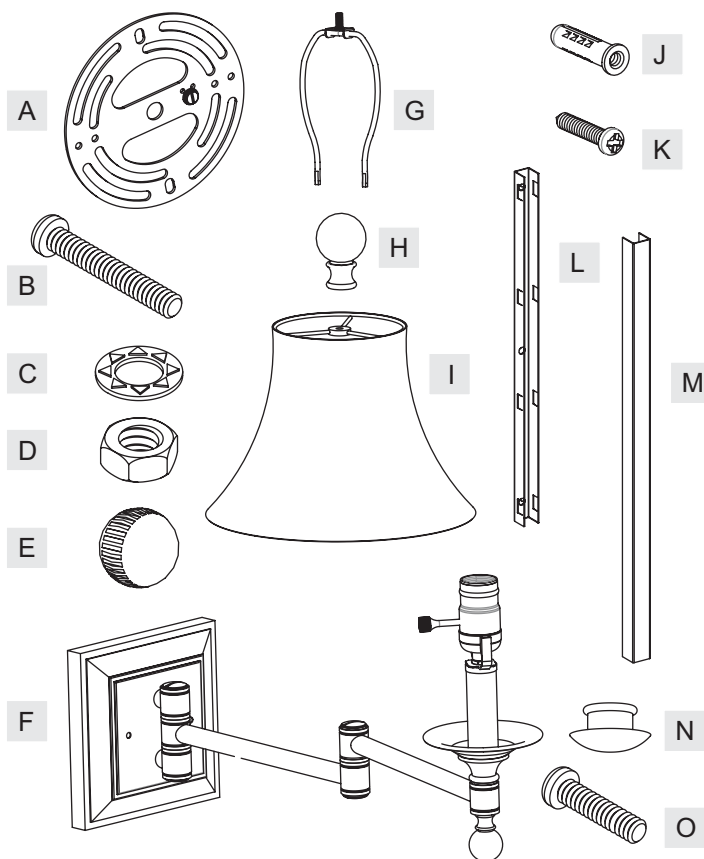


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www. quoizel. com](http://www. quoizel. com)

Q1560BN

FINISH: BRUSHED NICKEL

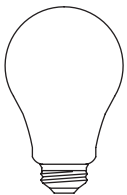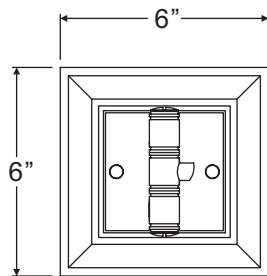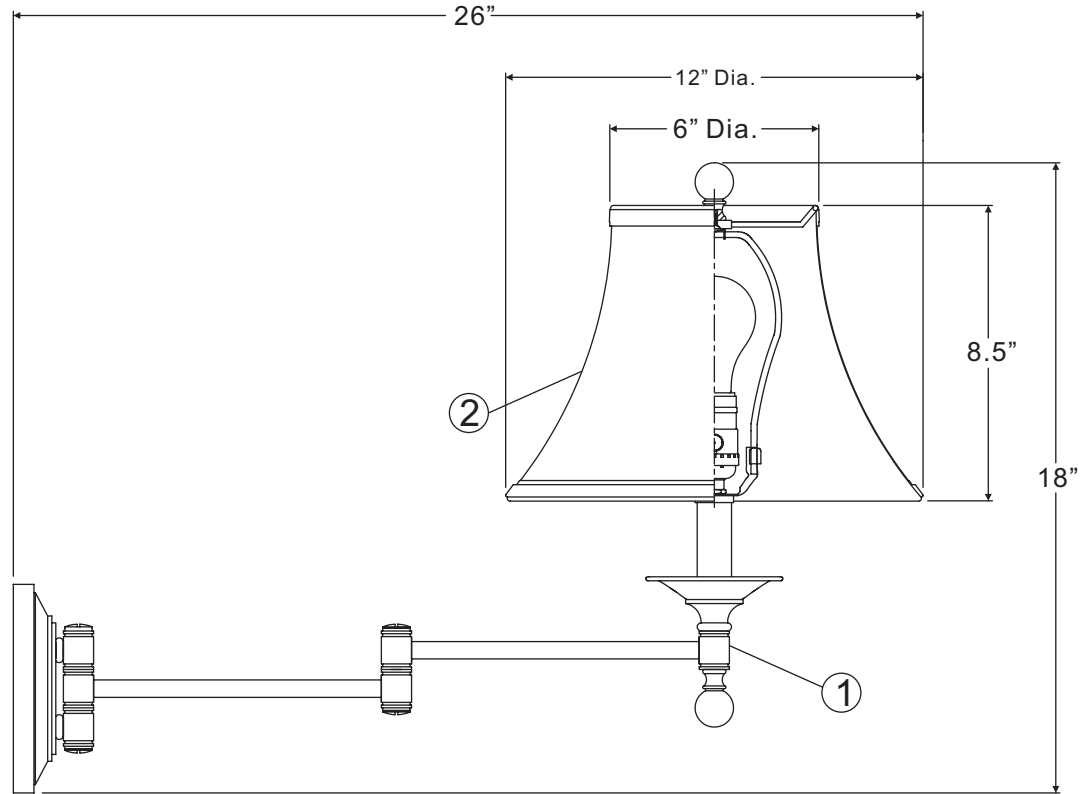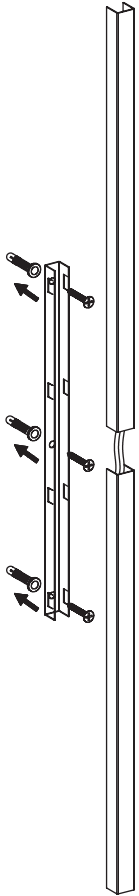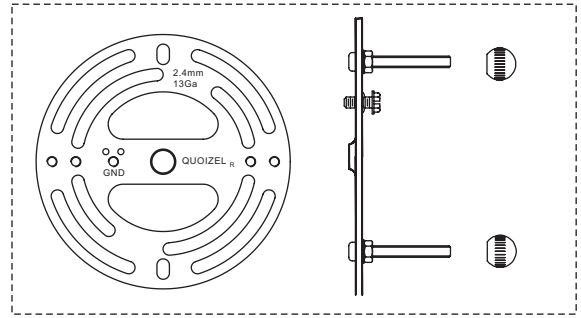

(1)100W Medium  
Base Bulb  
(Not Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"


NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	11560BNQ	BASE BRUSHED NICKEL Q1560BN	1
2	S1502OW	SHADE ROUND BELL OFF WHITE 6"X12"X8.5"	1

## Assembly Instruction Sheet #IS-Q1560BN For Style Q1560BN

### For Wall Mount Portable


#### STEP 1 – Mark Points on the Wall

- A. Attach the Crossbar (A) onto the desired location on the wall surface. Mark two points on the wall surface from the holes on the Crossbar (A) that you would like to pass Self-tapping Screws (K).

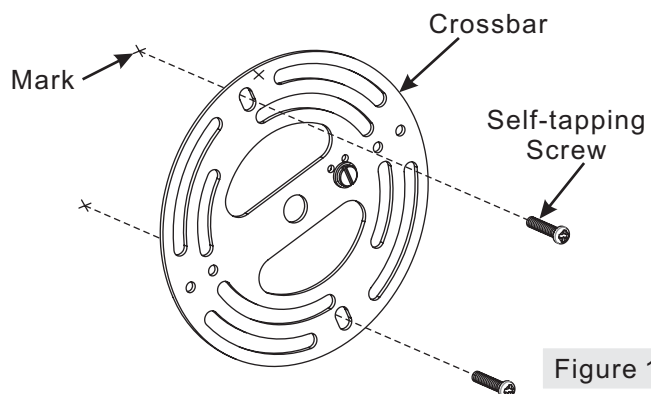


#### STEP 2 – Install Mounting Screw

- A. Thread the Short Mounting Screws (O) into the holes on the Crossbar (A). Pass the Lock Washers (C) over the Short Mounting Screws (O) and thread the Hex Nuts (D) onto the screws. Hand tighten until snug.

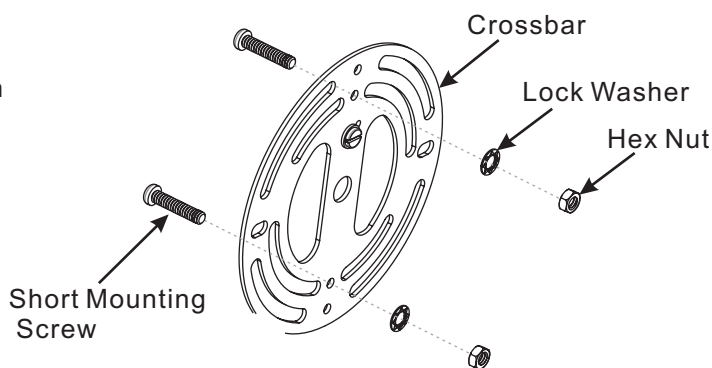

#### STEP 3 – Install Inner Backplate

- A. Drill proper holes for Wall Anchors (J) on the marked points on the wall surface.  
B. Insert the Wall Anchors (J) into the drilled holes on the wall surface. Attach the Crossbar (A) onto the wall surface. Secure by threading Self-tapping Screws (K) into the Wall Anchors (J). Hand tighten until snug.

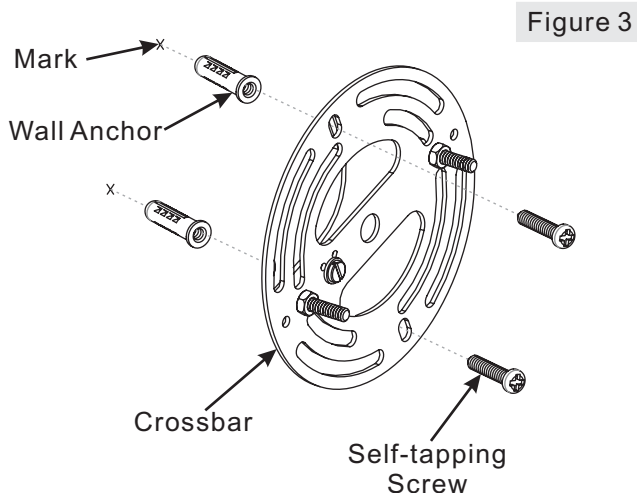


Thank you for purchasing a Quoizel product.  
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www. quozel. com](http://www. quozel. com)

# Assembly Instruction Sheet #IS-Q1560BN For Style Q1560BN


## STEP 4 – Attach Fixture Body to Mounting Screw

- A. Place the Backplate of the Fixture Body (F) over the Short Mounting Screw (O) and secure with Mounting Balls (E). Hand tighten until snug.

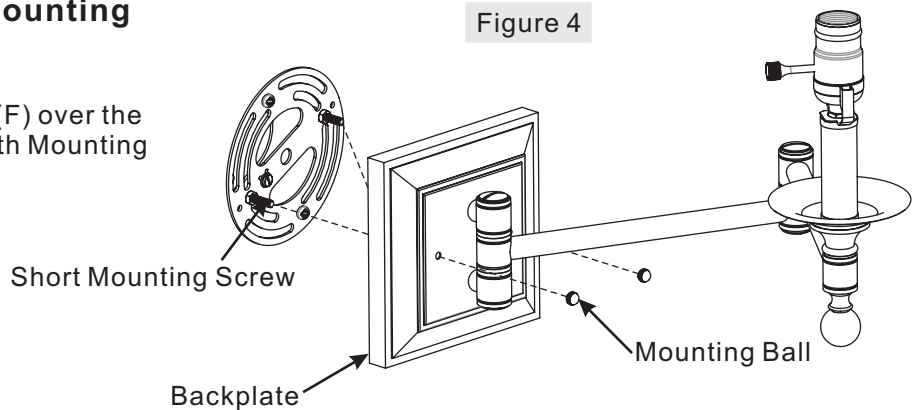

## STEP 5 – Attach Cord Cover Backplate and Cord Cover

- A. Locate the Cord Cover Backplate (L). To position the Cord Cover Backplate (L) measure approx. 12 1/2" inches down from the base of the Backplate. Mark the points from the holes on the Cord Cover Backplate (L) for Wall Anchors (K).
- B. Using a portable hand drill, drill proper holes from the marks in the wall surface for the Wall Anchors (K). Locate the Wall Anchors (K) and place into the holes in the wall surface.
- C. Place the Cord Cover Backplate (L) and match the holes with the Wall Anchors (K). Secure it by threading the Self-tapping Screws (J) into the Wall Anchors (K). Hand tighten until snug.
- D. Position the Supply Wire inside of the Cord Cover Backplate (L) so that it will not be pinched. Locate the Cord Cover (M) and secure it to the Cord Cover Backplate (L) by pressing it over the Backplate.

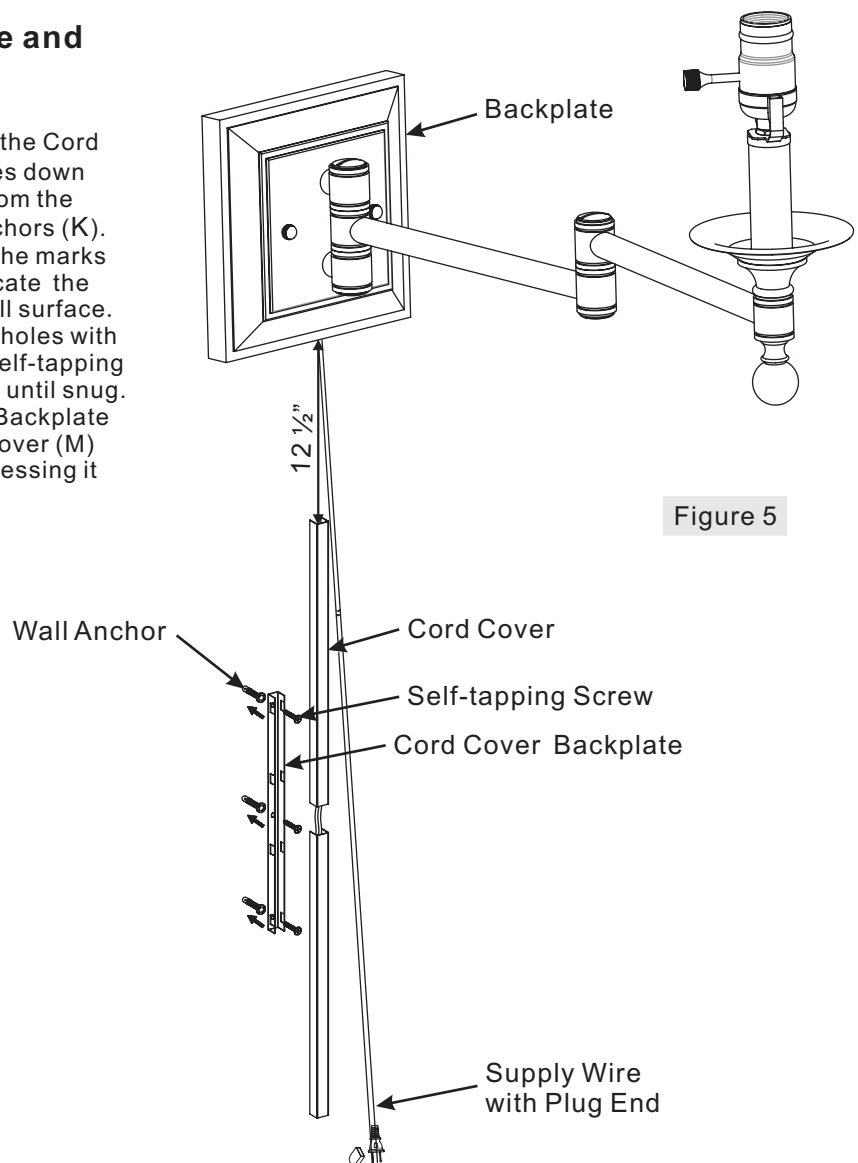

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)

# Assembly Instruction Sheet #IS-Q1560BN

## For Style Q1560BN

### STEP 6 – Install Harp

- A. Install the Harp (G) by pressing the ends of the Harp (G) into the Harp Clips as shown.

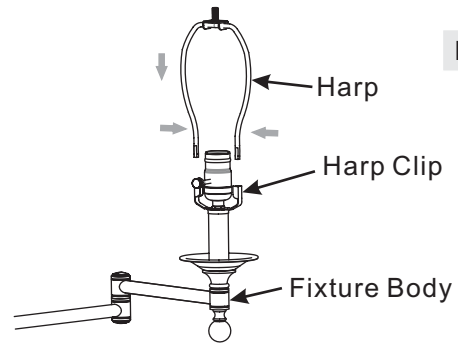


Figure 6

### STEP 7 – Assemble Shade

- A. Place the Shade (I) over the top end of the Harp (G) and secure with the Finial (H). Hand tighten until snug.

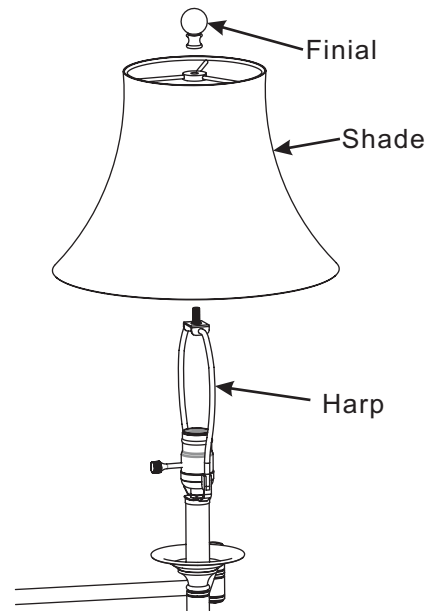


Figure 7

### STEP 8 – Install Bulb

- A. This fixture uses standard bulb with medium screw base. Maximum 100 watts.  
B. Insert bulb and screw snugly into place.

Your fixture is now assembled and ready to use. Enjoy!

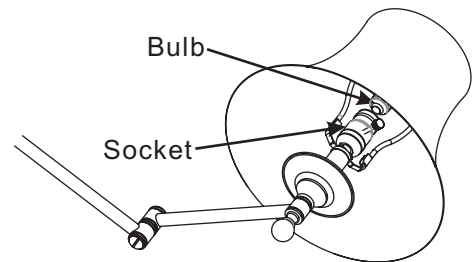


Figure 8

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)

# Assembly Instruction Sheet #IS-Q1560BN For Style Q1560BN

## For Fixed Wall Mount

### STEP 9 – Install Mounting Screw

- A. Thread the Mounting Screws (B) into the holes on the Crossbar (A). Pass the Lock Washers (C) over the Mounting Screws (B) and thread the Hex Nuts (D) onto the screws. Hand tighten until snug.

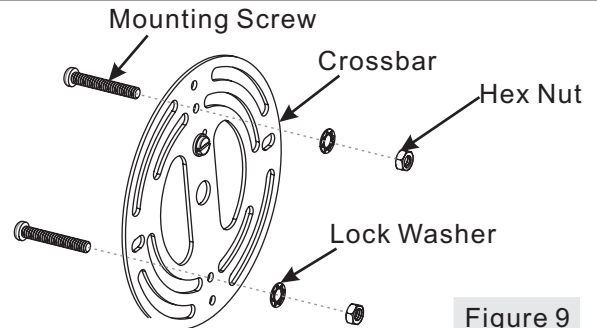


Figure 9

### STEP 10 – Install Inner Backplate to Outlet Box

- A. Refer to Step 2 to complete the mounting screw installation.  
B. Attach the Crossbar (A) to Outlet Box and secure by threading Outlet Box Screws (not supplied) into the Mounting Holes on the Outlet Box. Tighten until snug.

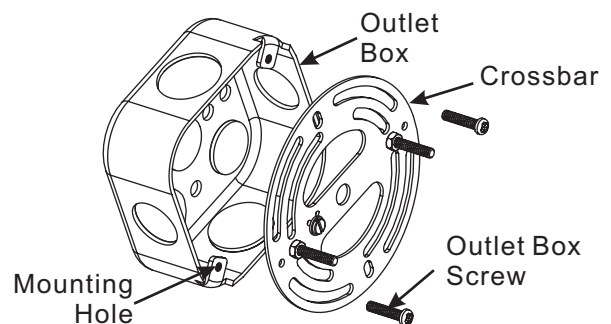


Figure 10

### STEP 11 – Make Wire Connections

- A. Pull out the Supply Wire with Plug End and cut down it, left 6" cord for the Wire Connection.  
B. Insert Plug Insert to cover the Exiting Hole as shown.  
C. Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.  
D. Connect White Supply Wire from the Outlet Box to Ribbed side from fixture.  
E. Connect Black (or Red) Supply Wire from the Outlet Box to Smooth side from fixture.  
F. Twist connectors until wires are tightly joined together.  
G. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

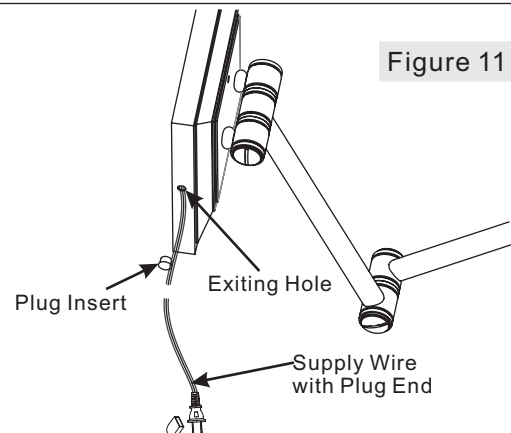


Figure 11

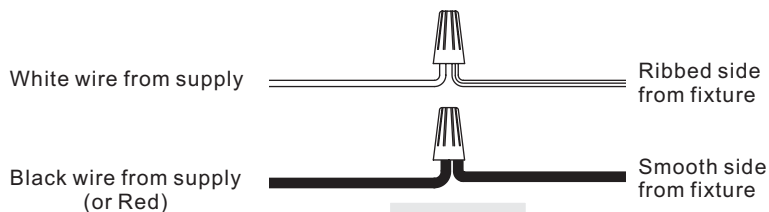


Figure 12

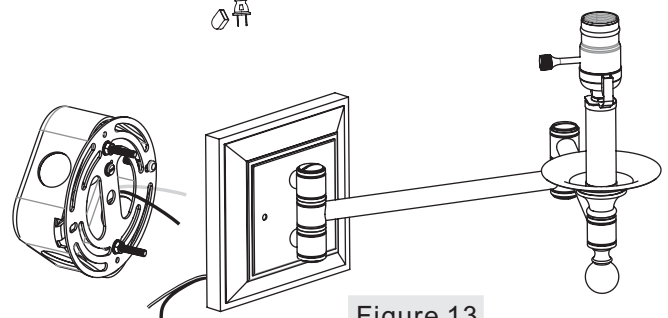


Figure 13

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)

# Assembly Instruction Sheet #IS-Q1560BN For Style Q1560BN

## STEP 12 – Attach Fixture Body to Mounting Screw

- Place the Backplate of the Fixture Body (F) over the Mounting Screws (B) and secure with Mounting Balls (E). Hand tighten until snug.
- Install harp as step 6.
- Assemble Shade as step 7.
- Install bulb as step 8.

Your fixture is now assembled and ready to use. Enjoy!

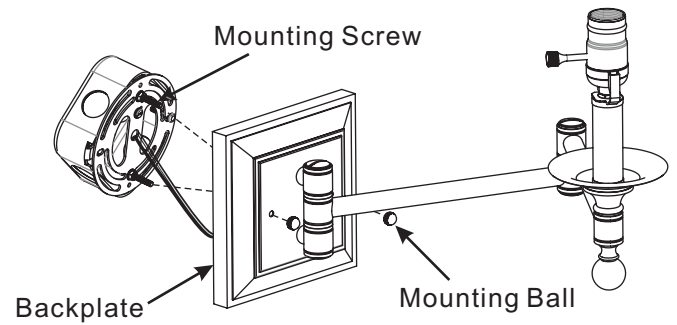


Figure 14

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www. quoizel. com](http://www. quoizel. com)