

Quoizel, Inc.  
6 Corporate Parkway  
Goose Creek, SC  
29445

Customer Service  
Phone 631.273.2700  
Fax 631.231.7102  
www.quoizel.com

## Assembly Instruction Sheet #IS-UPPA5005IS For Style UPPA5005IS

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

**Bulb Recommended:** (5) Candelabra Base 60W Maximum

**Estimated Assembly Time:** 20-30 minutes

**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



### Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

### Package Contents

Part	Description	Quantity
A	Crossbar	1 pc.
B	Nipple	1 pc.
C	Lock Washer	2 pcs.
D	Hex Nut	2 pcs.
E	Ceiling Canopy	1 pc.
F	Fixture Chain	1 pc.
G	Fixture Loop	1 pc.
H	Canopy Chain Loop	1 pc.
I	Canopy Lock Ring	1 pc.
J	6" Rod	2 pcs.
K	12" Rod	2 pcs.
L	Shade	5 pcs.
M	Diffuser	5 pcs.
N	Socket Collar	5 pcs.
O	Fixture Assembly	1 pc.


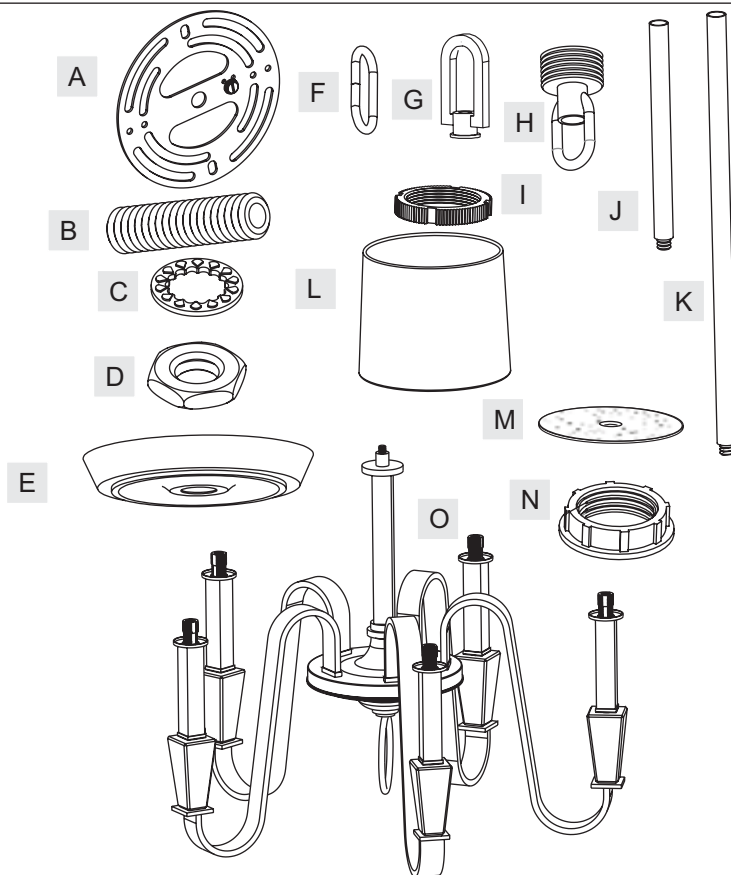


Thank you for purchasing a Quoizel product.



Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)

UPPA5005IS

FINISH: IMPERIAL SILVER

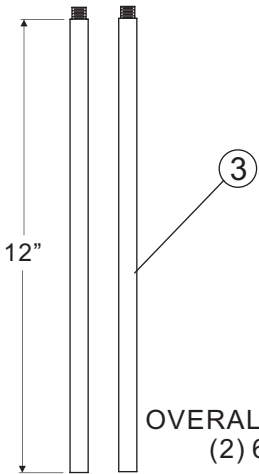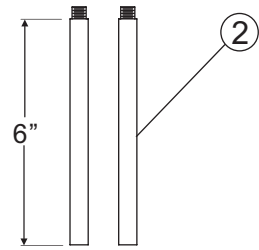

62.5"  
OVERALL HEIGHT INCLUDES  
(2) 6" AND 12" RODS

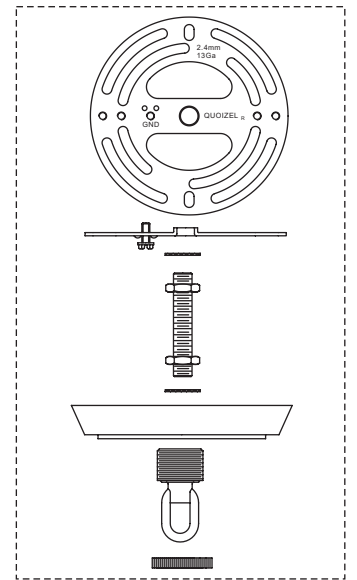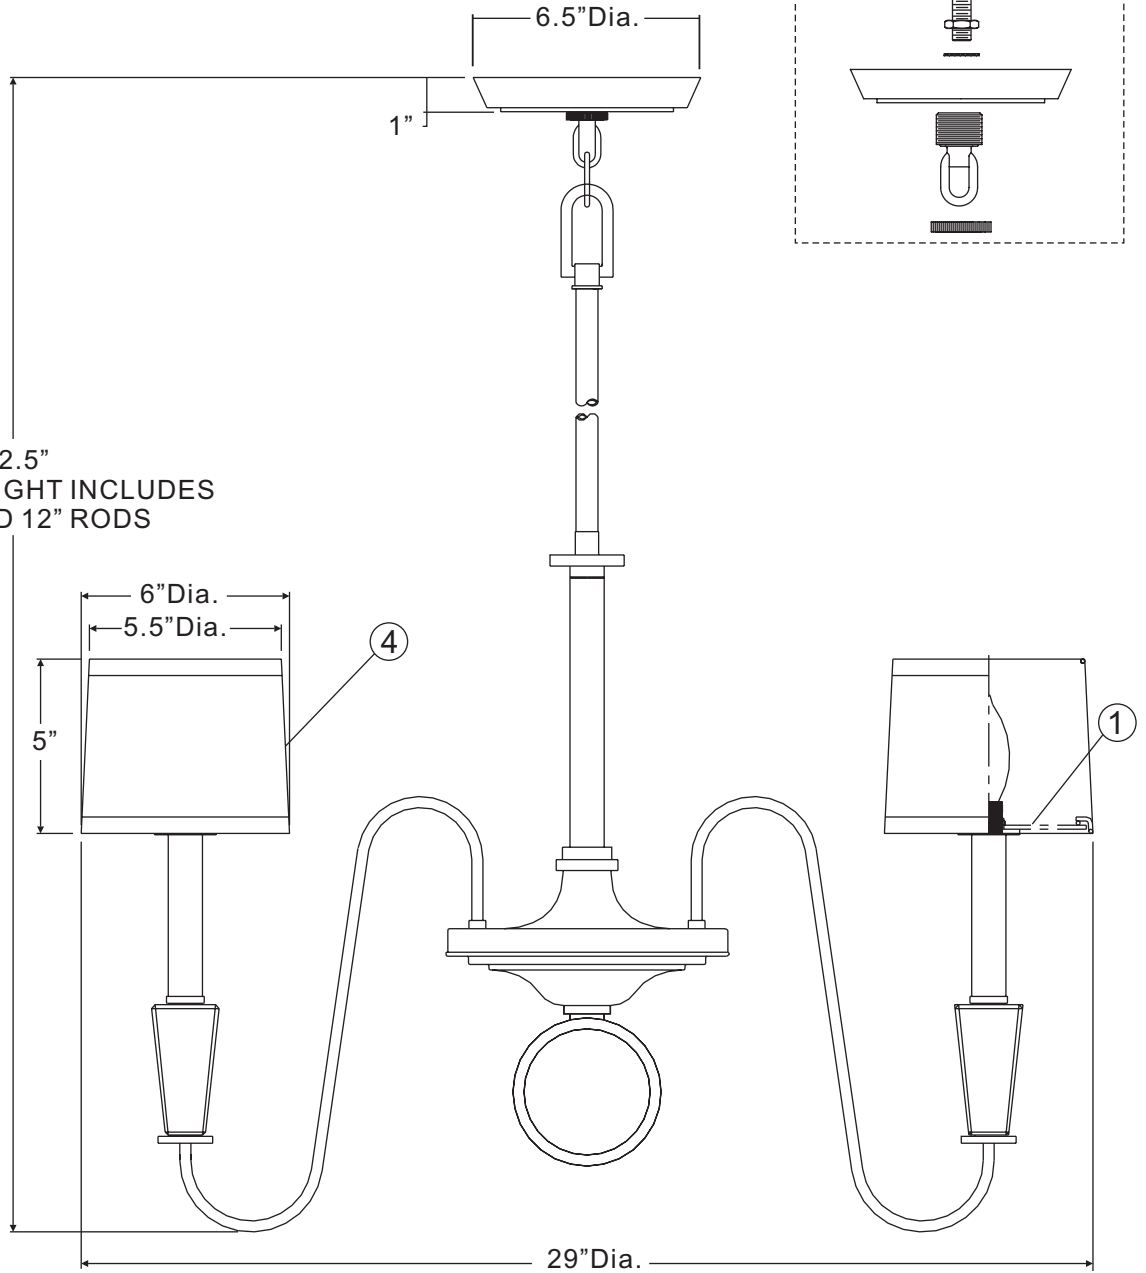

(5) 60W Candelabra  
Base Bulbs  
(No Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"

NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1	G3202DI	DIFFUSER SANDBLASTED ONE SIDE	5
2	9007EXIS	ROD EXTENSION IMPERIAL SILVER 6"L X 0.63"D	2
3	9008EXIS	ROD EXTENSION IMPERIAL SILVER 12"L X .63"D	2
4	S1354WH	SHADE WHITE LINEN 5"H X 6"D	5

# Assembly Instruction Sheet #IS-UPPA5005IS For Style UPPA5005IS

## STEP 1 – Adjust Socket Assembly

- A. Unfold support arms on Socket assembly to proper locations.

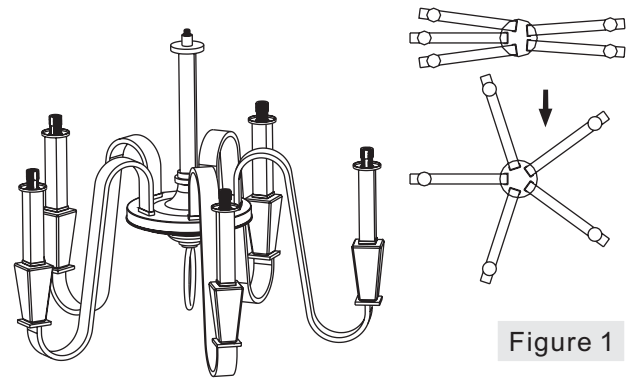


Figure 1

## STEP 2 – Assemble Rods

- A. Determine the Rods (J/K) to be assembled to the Fixture Assembly (O) according to your hanging height.  
B. Pass Supply Wires and Ground Wire through the chosen Rods (J/K) and then thread the chosen Rods (J/K) and the Fixture Assembly (O) together. Hand tighten until snug.

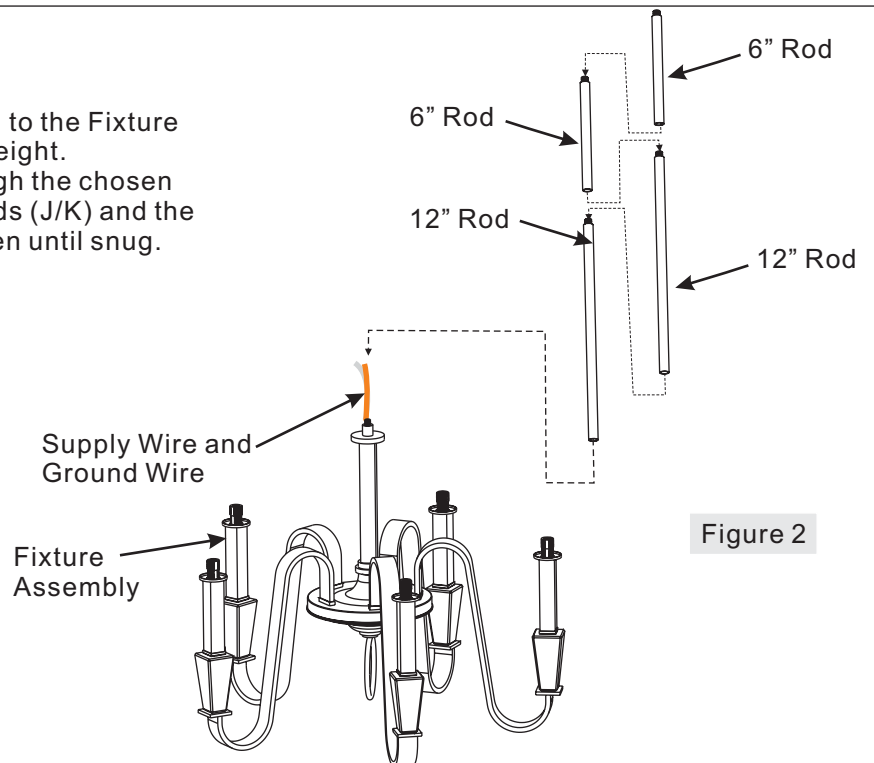


Figure 2


Thank you for purchasing a Quoizel product.  
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www. quoizel. com](http://www. quoizel. com)

# Assembly Instruction Sheet #IS-UPPA5005IS

## For Style UPPA5005IS


### STEP 3 – Assemble Fixture Loop to Upper Rod

- A. Pass Supply Wires and Ground Wire through the Fixture Loop (G) then thread the Fixture Loop (G) and the Upper Rod together. Hand tighten until snug.

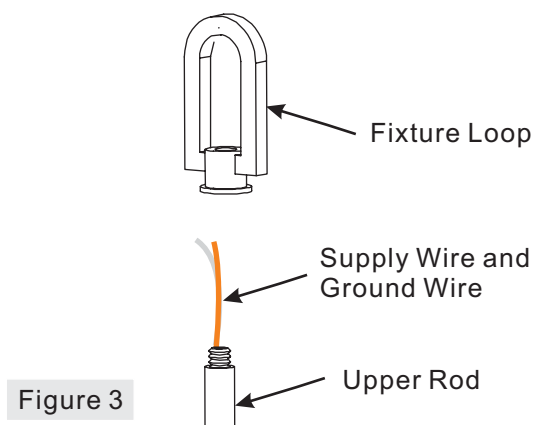


### STEP 4 – Attach Crossbar to Outlet Box

- A. Secure the Corssbar (A) to the outlet box with outlet box screws (not supplied). Tighten until snug.

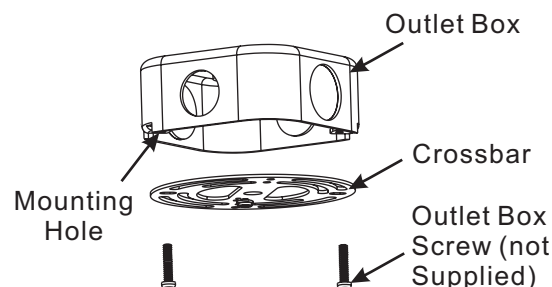

### STEP 5 – Attach Nipple to Crossbar

- A. Thread one Hex Nut (D) onto the top end of the Nipple (B).  
B. Place one Lock Washer (C) over the top end of the Nipple (B) and then thread the Nipple (B) into the center lock hole of the Crossbar (A).  
C. Using pliers, thread the Hex Nut (D) against the Crossbar (A) and hand tighten until snug.

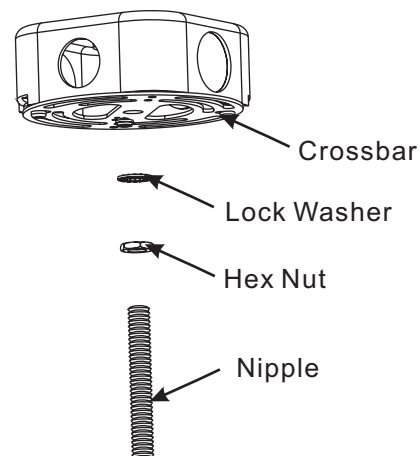

Thank you for purchasing a Quoizel product.  
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)

# Assembly Instruction Sheet #IS-UPPA5005IS For Style UPPA5005IS

## STEP 6 – Attach Canopy Chain Loop to Nipple

- Thread another Hex Nut (D) onto the end of the Nipple (B).
- Place the Lock Washer (C) over the end of the Nipple (B) and then thread the Canopy Chain Loop (H) onto the end of the Nipple (B).
- Using pliers, thread the Hex Nut (D) against the Canopy Chain Loop (H) and hand tighten until snug.

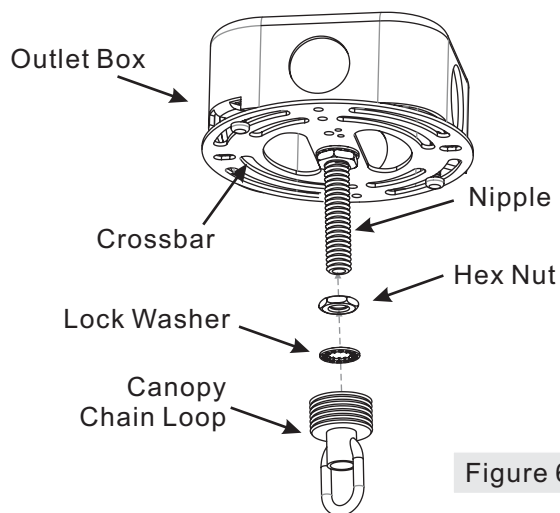


Figure 6

## STEP 7 – Assemble Ceiling Canopy

- Push the Ceiling Canopy (E) upward over the Outlet Box. Thread the Canopy Lock Ring (I) onto the Canopy Chain Loop (H) and tighten until snug to secure the Ceiling Canopy (E).

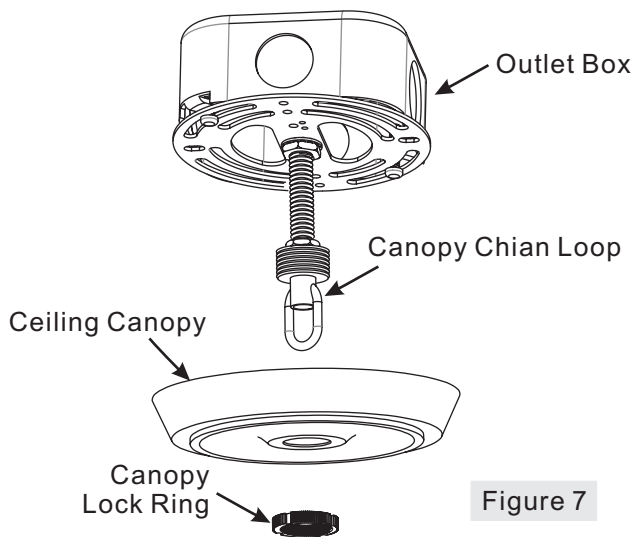


Figure 7

## STEP 8 – Attach Fixture Chain to Canopy Chain Loop and Fixture Loop

- You may need to use plier to open the chain links. If so, put a cloth over the chain to protect the finish from the pliers.
- Attach one end of the Fixture Chain (F) onto the Canopy Chain Loop (H) and then attach the other end of the Fixture Chain (F) onto the Fixture Loop on the top of the fixture.

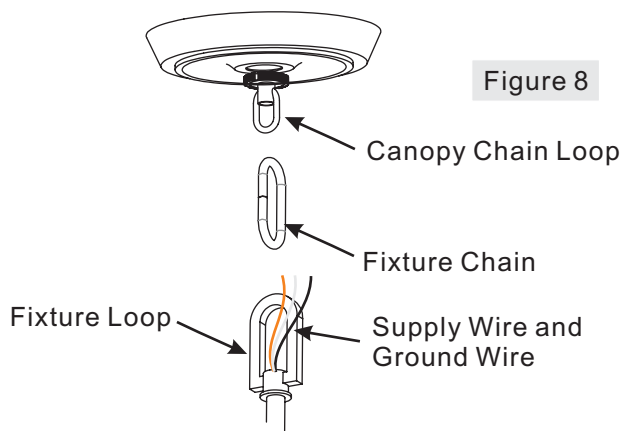


Figure 8

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)

# Assembly Instruction Sheet #IS-UPPA5005IS For Style UPPA5005IS

## STEP 9 – Pass Supply Wires through Fixture Chain

- A. Pull the Supply Wires and Ground Wire up through the Fixture Chain (F) alternating links. Push the wires up through the Canopy Chain Loop (H) into the outlet box.

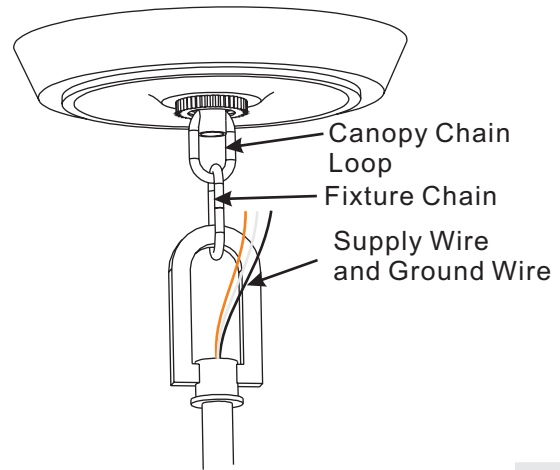


Figure 9

## STEP 10 – Make Wire Connections

- A. Un-thread the Canopy Lock Ring (I) and slide Canopy Lock Ring (I) and Ceiling Canopy (E) down the Fixture Chain.  
B. Push all slack fixture wire through Canopy Chain Loop into Outlet Box. Trim excess fixture wire leaving a minimum of 6 inch. Hanging out of the Outlet Box.  
C. Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.  
D. Connect White Supply Wire from the Outlet Box to White Wire from fixture.  
E. Connect Black (or Red) Supply Wire from the Outlet Box to Black Wire from fixture.  
F. Connect Ground Wire from the Outlet Box to Ground Wire from fixture.  
G. Twist connectors until wires are tightly joined together.  
H. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.  
I. Re-attach the Ceiling Canopy (E) as shown in Step 5.

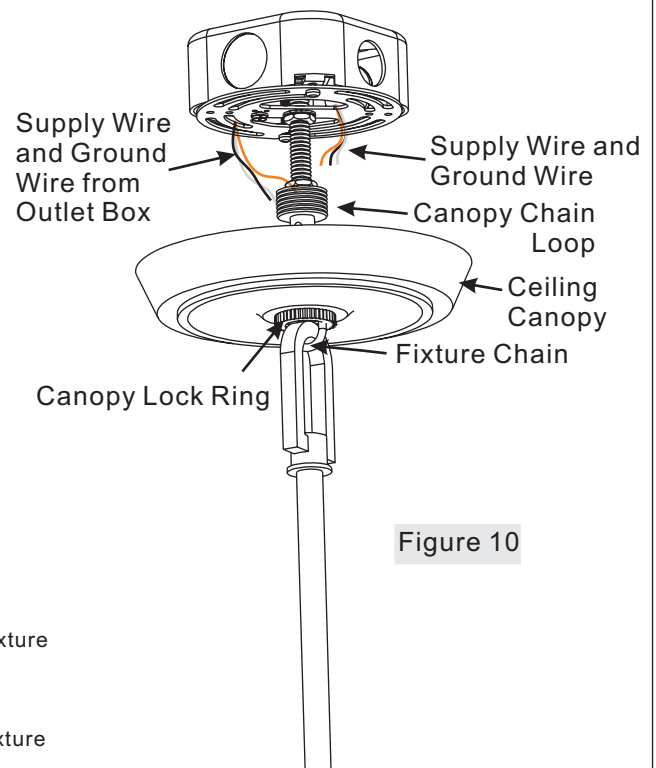


Figure 10

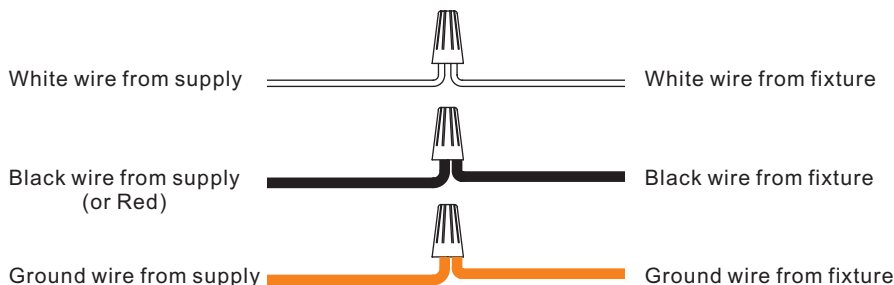


Figure 11


**Thank you for purchasing a Quoizel product.**  
**Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700**  
**or visit us on-line at [www.quoizel.com](http://www.quoizel.com)**

## Assembly Instruction Sheet #IS-UPPA5005IS For Style UPPA5005IS

### STEP 11 – Attach Shade to Fixture Body

- A. Place the Diffuser (M) over the Socket with Sandblast surface upward. Thread the Socket Collar (P) onto the Socket to secure the Diffuser (M). Hand tighten until snug.
- B. Place the Shade (L) over the Diffuser (M) properly.


Note: If the Shade (L) isn't level after assembly, please adjust the support arm slightly to make the Shade (L) level.

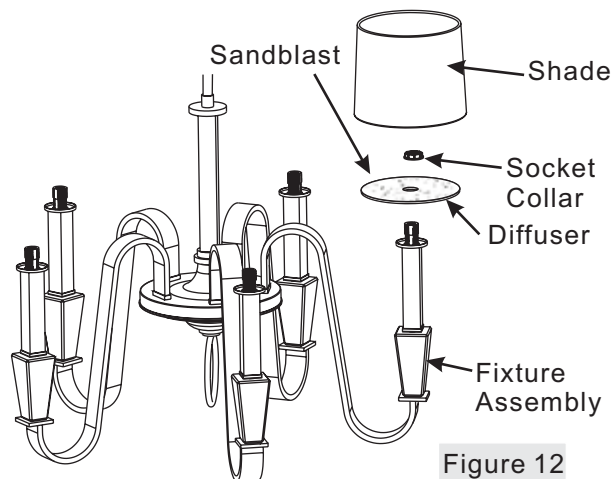

### STEP 12 – Install Bulb

- A. This fixture uses standard bulbs with a standard screw base. Maximum 60 watts.
- B. Insert bulb and screw properly into place.

Your fixture chandelier lamp is now assembled and ready to use. Enjoy!

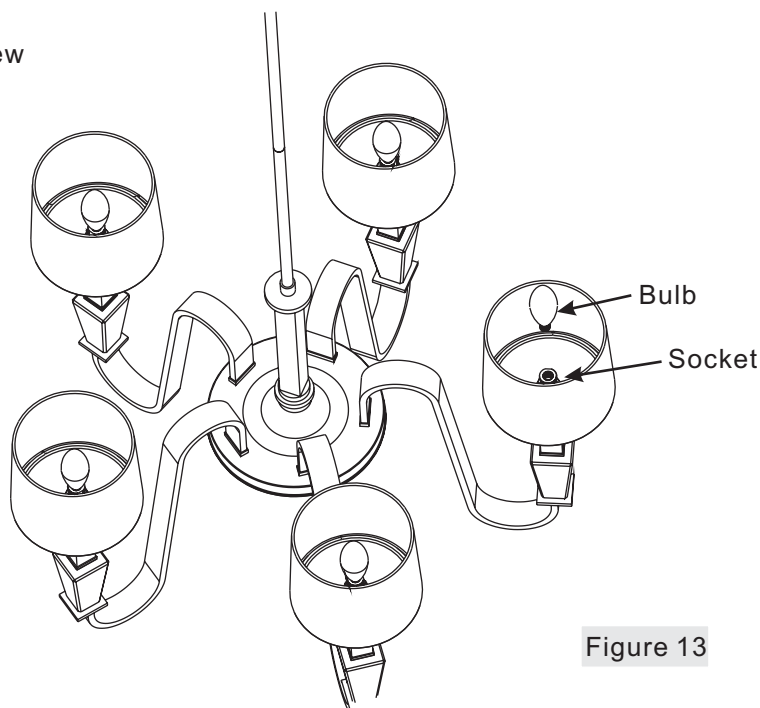

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)