

Quoizel, Inc.  
6 Corporate Parkway  
Goose Creek, SC  
29445

Customer Service  
Phone 631.273.2700  
Fax 631.231.7102  
www. quoizel. com

## Assembly Instruction Sheet #IS-UPLB5005BN For Style UPLB5005BN

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

**Bulb Recommended:** (5) Frosted G9 Halogen 75W Maximum (supplied)

**Estimated Assembly Time:** 20-30 minutes

**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



### Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.





Do not touch the bulb with bare hands use a cloth or glove.

Thank you for purchasing a Quoizel product.


Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www. quoizel. com](http://www. quoizel. com)

UPLB5005BN

FINISH: BRUSHED NICKEL

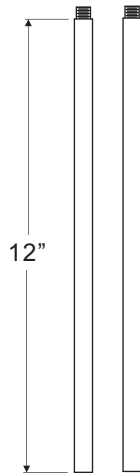
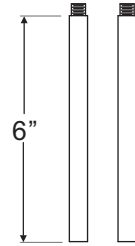
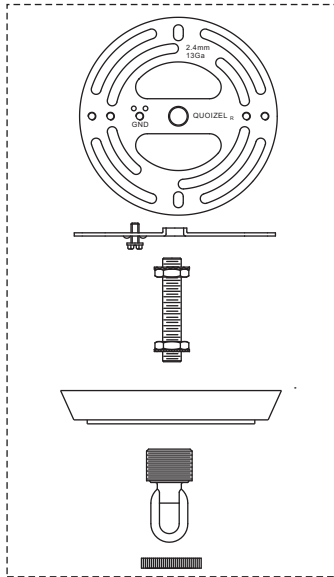


1"

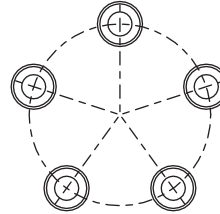

66"  
OVERALL HEIGHT  
INCLUDES  
(2) 6" AND 12" RODS

NOTE: TWO LIGHTS SHOWN FOR  
ILLUSTRATION PURPOSES ONLY.

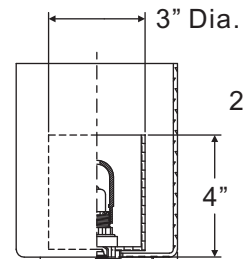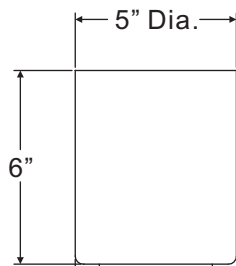

22.5"

4"

27.5" Dia.

(5) 75W Frosted  
G9 Halogen Bulbs  
(Supplied)

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/2"


NO.	PART NUMBER	REPLACEMENT PART DESCRIPTION	REQ.
1			

# Assembly Instruction Sheet #IS-UPLB5005BN

## For Style UPLB5005BN

### Package Contents

Part	Description	Quantity
A	Crossbar	1 pc.
B	Nipple	1 pc.
C	Lock Washer	2 pcs.
D	Hex Nut	2 pcs.
E	Ceiling Canopy	1 pc.
F	Canopy Chain Loop	1 pc.
G	Canopy Lock Ring	1 pc.
H	Fixture Chain	1 pc.
I	Fixture Loop	1 pc.
J	6" Rod	2 pcs.
K	12" Rod	2 pcs.
L	Bulb Shield	5 pcs.
M	G9 Bulb	5 pcs.
N	Center Column	1 pc.
O	Socket Collar	5 pcs.
P	Steel Collar	5 pcs.
Q	Inner Shade	5 pcs.
R	Shade	5 pcs.
S	Socket Assembly	1 pc.

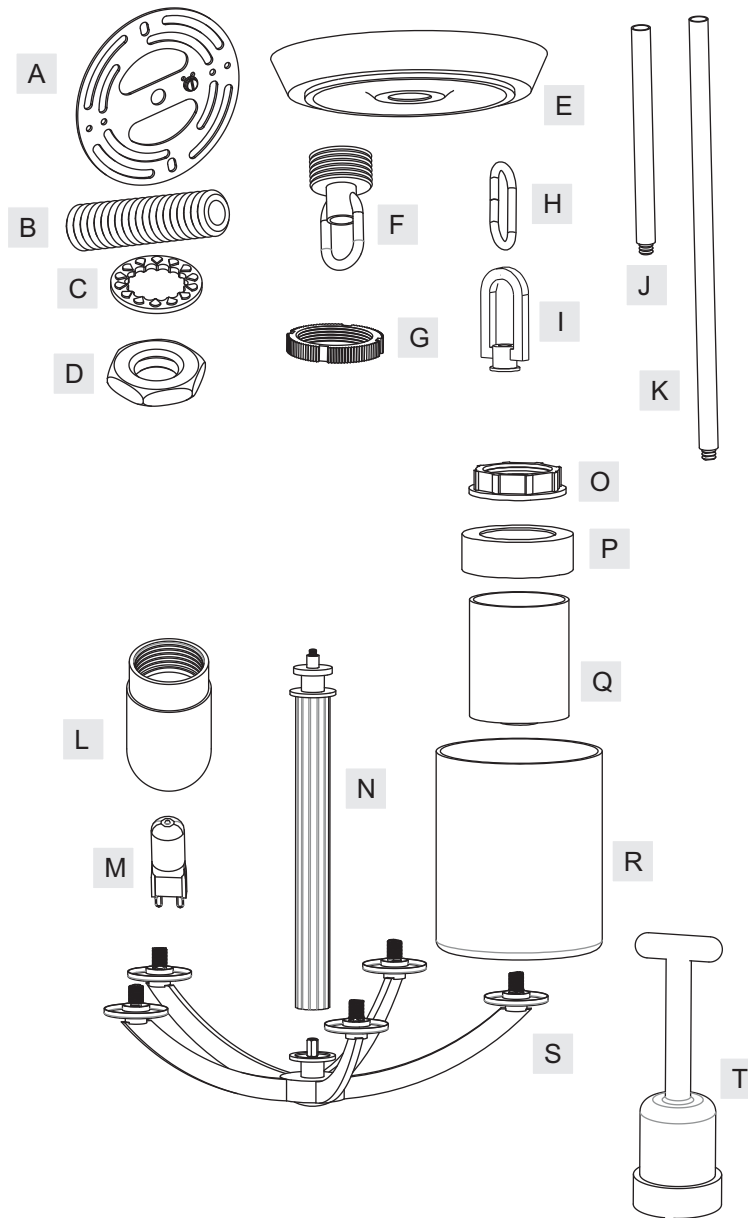

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www. quoizel. com](http://www. quoizel. com)


# Assembly Instruction Sheet #IS-UPLB5005BN

## For Style UPLB5005BN

### STEP 1– Attach Center Rod to Socket Assembly

- A. Thread the Center Column (N) onto the Hex Coupling on the top center of the Socket Assembly (S). Hand tighten until snug.

Figure 1

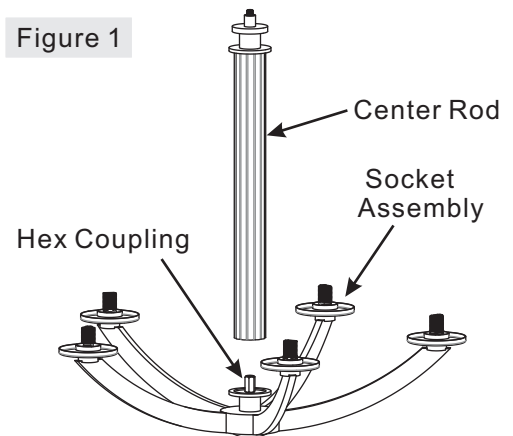

### STEP 2– Assemble Rods

- A. Determine the Rods (J/K) to be assembled to the fixture according to your hanging height.  
B. Pass Supply Wires and Ground Wire through the chosen Rods (J/K) and then thread the chosen Rods (J/K) to the Center Column (N). Hand tighten until snug.


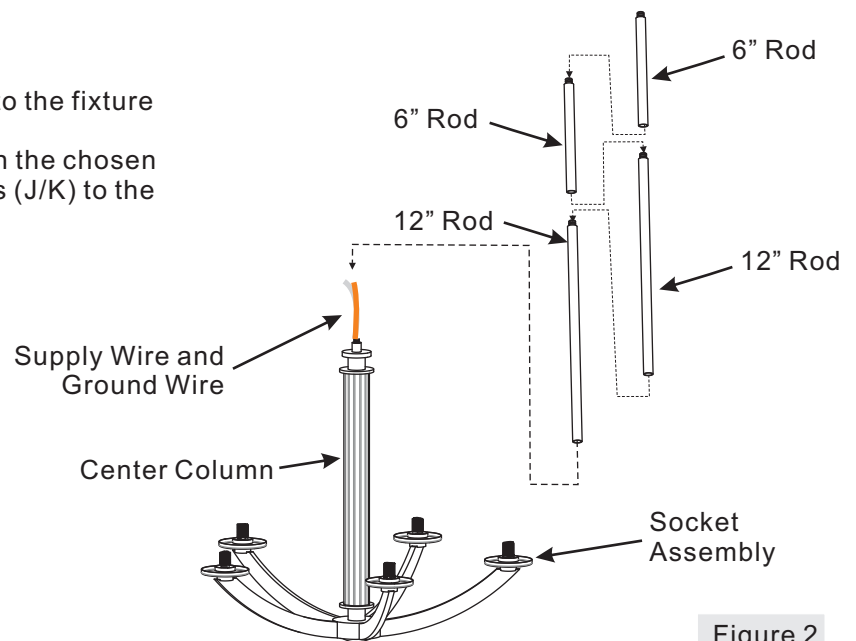


Figure 2

### STEP 3 – Assemble Fixture Loop to Upper Rod

- A. Pass Supply Wires and Ground Wire through the Fixture Loop (I) then thread the Fixture Loop (I) and the Upper Rod together. Hand tighten until snug.

Figure 3

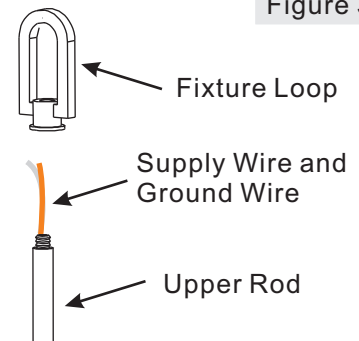

Thank you for purchasing a Quoizel product.  
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)

# Assembly Instruction Sheet #IS-UPLB5005BN

## For Style UPLB5005BN

### STEP 4 – Attach Crossbar to Outlet Box

- A. Secure the Crossbar (A) to the outlet box with outlet box screws (not supplied). Tighten until snug.

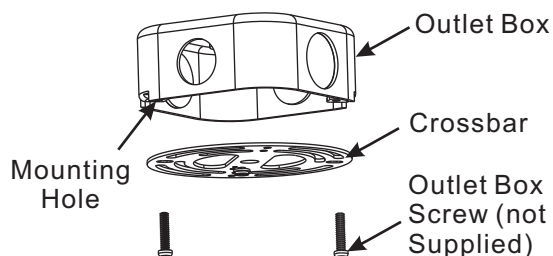


Figure 4

### STEP 5 – Attach Nipple to Crossbar

- A. Thread one Hex Nut (D) onto the top end of the Nipple (B).  
B. Place one Lock Washer (C) over the top end of the Nipple (B) and then thread the Nipple (B) into the center lock hole of the Crossbar (A).  
C. Using pliers, thread the Hex Nut (D) against the Crossbar (A) and hand tighten until snug.

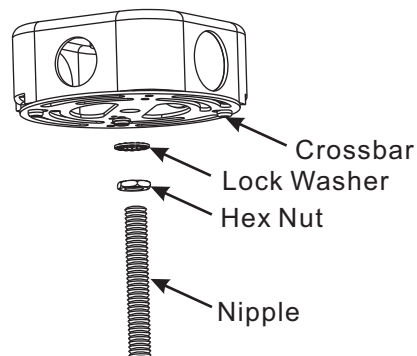


Figure 5

### STEP 6 – Attach Canopy Chain Loop to Nipple

- A. Thread another Hex Nut (D) onto the end of the Nipple (B).  
B. Place the Lock Washer (C) over the end of the Nipple (B) and then thread the Canopy Chain Loop (F) onto the end of the Nipple (B).  
C. Using pliers, thread the Hex Nut (D) against the Canopy Chain Loop (F) and hand tighten until snug.

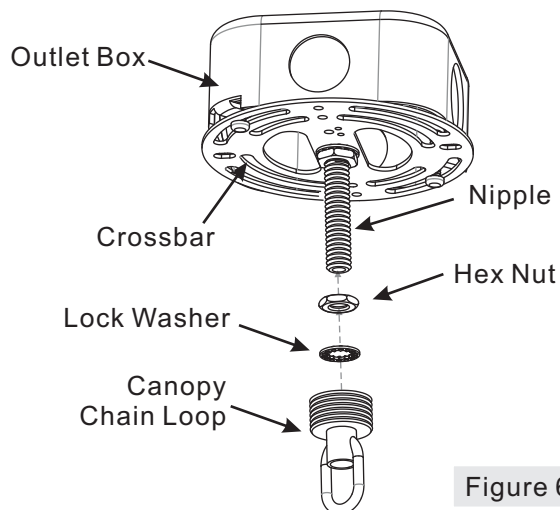


Figure 6

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)

# Assembly Instruction Sheet #IS-UPLB5005BN For Style UPLB5005BN

## STEP 7 – Assemble Ceiling Canopy

- A. Push the Ceiling Canopy (E) upward over the Outlet Box. Thread the Canopy Lock Ring (G) onto the Canopy Chain Loop (F) and tighten until snug to secure the Ceiling Canopy (E).

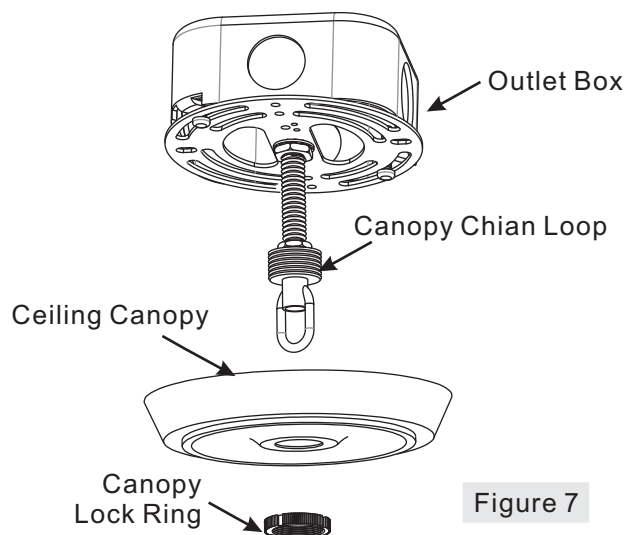


Figure 7

## STEP 8 – Attach Fixture Chain to Canopy Chain Loop and Fixture Loop

- A. Attach the Fixture Chain (H) onto the Canopy Chain Loop (F) and the Fixture Loop (I) on the top of the fixture.

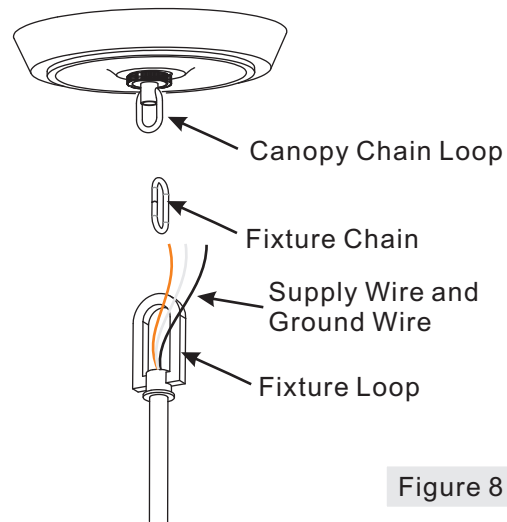


Figure 8

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)

# Assembly Instruction Sheet #IS-UPLB5005BN For Style UPLB5005BN

## STEP 9 – Pass Supply Wires through Fixture Chain

- A. Pull the Supply Wires and Ground Wire up through the Fixture Chain (H). Push the wires up through the Canopy Chain Loop (F) into the outlet box.

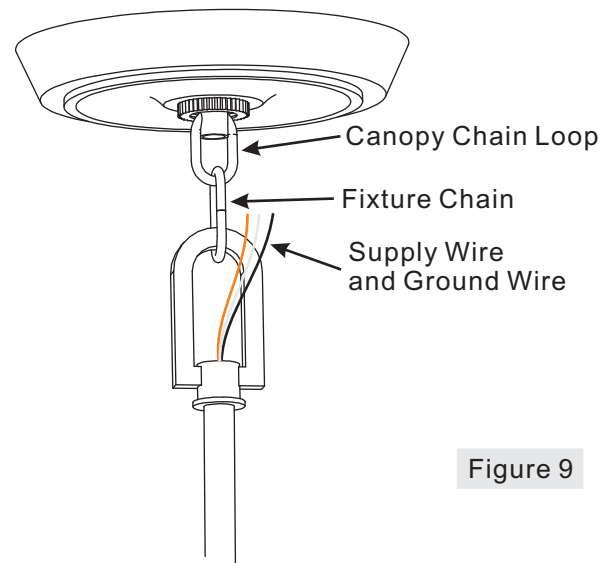


Figure 9

## STEP 10 – Make Wire Connections

- A. Un-thread the Canopy Lock Ring (G) and slide Canopy Lock Ring (G) and Ceiling Canopy (E) down the Fixture Chain.  
B. Push all slack fixture wire through Canopy Chain Loop into Outlet Box. Trim excess fixture wire leaving a minimum of 6 inch. Hanging out of the Outlet Box.  
C. Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.  
D. Connect White Supply Wire from the Outlet Box to White Wire from fixture.  
E. Connect Black (or Red) Supply Wire from the Outlet Box to Black Wire from fixture.  
F. Connect Ground Wire from the Outlet Box to Ground Wire from fixture.  
G. Twist connectors until wires are tightly joined together.  
H. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.  
I. Re-attach the Ceiling Canopy (E) as shown in Step 7.

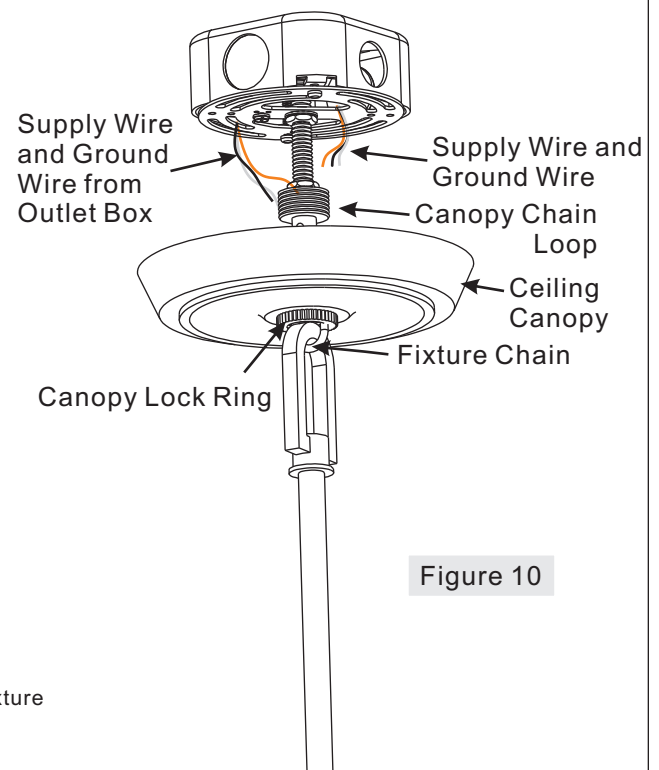


Figure 10

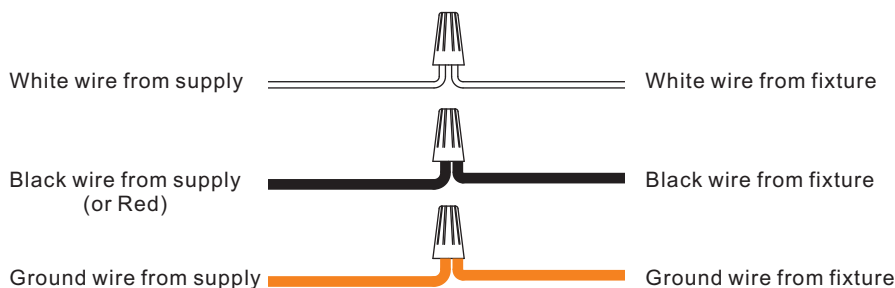


Figure 11

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)

# Assembly Instruction Sheet #IS-UPLB5005BN For Style UPLB5005BN

## STEP 11 – Attach Shade to Fixture Body

- A. Place the Shade (R), the Inner Shade (Q) and the Steel Collar (P) over Socket as shown. By using the Socket Collar Tool (T), thread the Socket Collar (O) onto the Socket to secure the shades. Hand tighten until snug.

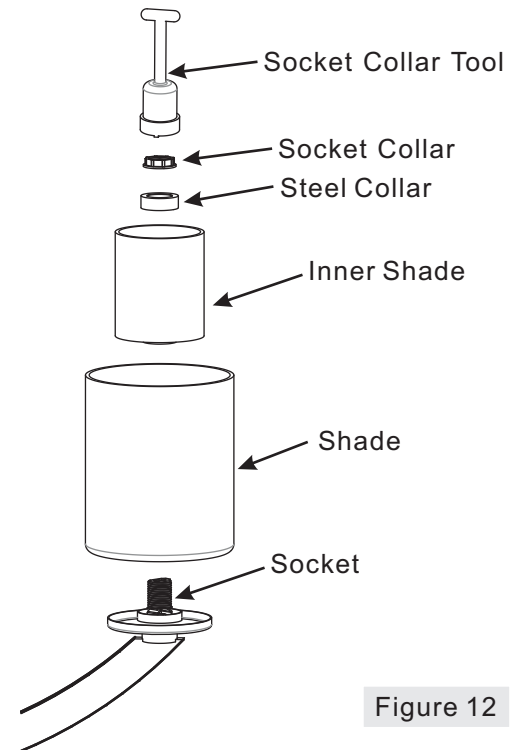



Figure 12

## STEP 12 – Install Bulb and Bulb Shield

- A. This fixture uses Frosted G9 Halogen Bulbs (supplied). Maximum 75 watts.  
B. Insert bulb and seat properly into place.  
C. Screw Bulb Shield (M) onto the Socket and hand tighten until snug.  
**IMPORTANT:** Do not touch the bulb with bare hands use a cloth or glove.

Your fixture is now assembled and ready to use. Enjoy!

Figure 13

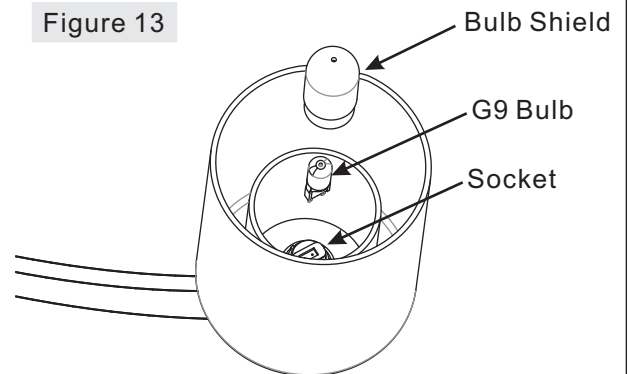

## CAUTION FOR BULB REPLACING

- A. When replace bulb, turn off power and allow lamp to cool. For safety purpose, wear gloves and eye protection.  
B. If bulb is scratched or cracked, DO NOT use the lamp to avoid breakage during use or installation.  
C. Use only in fixtures rated for lamps wattage and voltage.  
D. Lamp operate under high pressure generating intense heat. Prevent contact with liquid and combustible materials.

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700  
or visit us on-line at [www.quoizel.com](http://www.quoizel.com)