Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631.273.2700 Fax 631.231.7102 www.quoizel.com

Assembly Instruction Sheet #IS-UPMM5005WT For Style UPMM5005WT

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Bulb Recommended: (5) G9 Base Frosted G9 Halogen 75W Maximum

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.



Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

Do not touch the bulb with bare hands use a cloth or glove.


Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

c 2012 Quoizel Inc.

December 2012

1 of 7

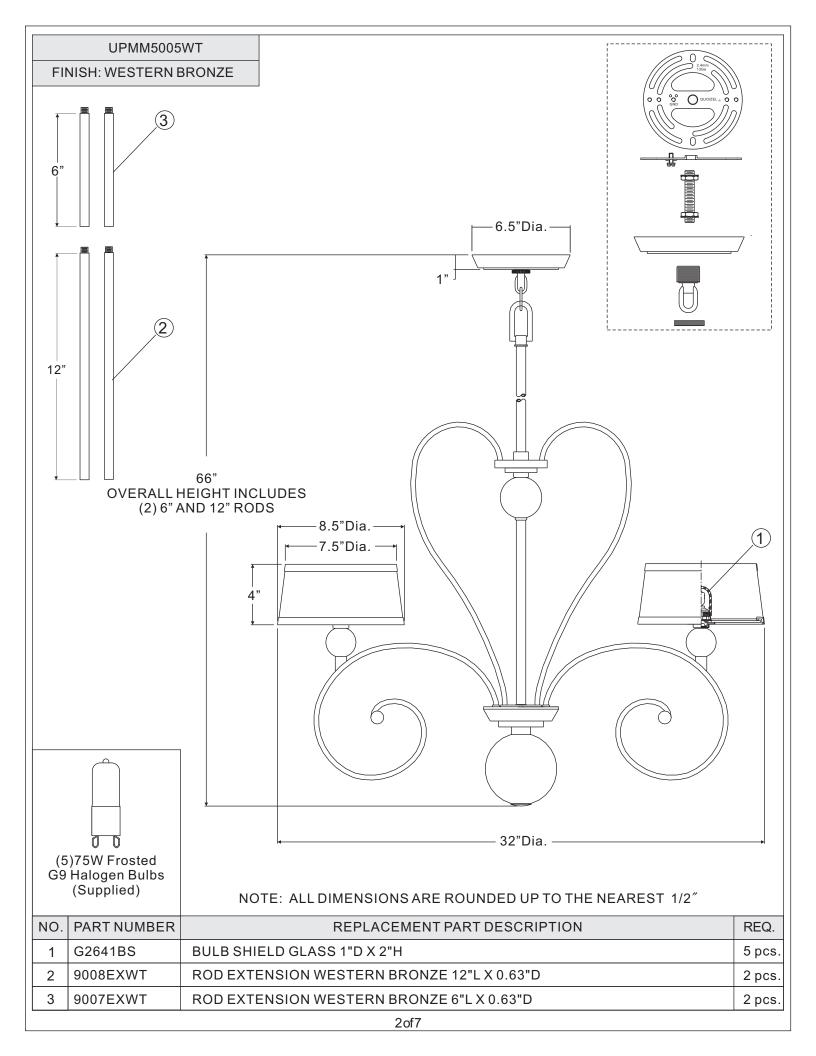




Assembly Instruction Sheet #IS-UPMM5005WT For Style UPMM5005WT

Package Contents

Part	Description	Quantity
Α	Crossbar	1 pc.
В	Nipple	1 pc.
С	Lock Washer	2 pcs.
D	Hex Nut	2 pcs.
E	Ceiling Canopy	1 pc.
F	Fixture Chain	1 pc.
G	Fixture Loop	1 pc.
Н	Canopy Chain Loop	1 pc.
I	Canopy Lock Ring	1 pc.
J	6" Rod	2 pcs.
K	12" Rod	2 pcs.
L	Shade	5 pcs.
М	Diffuser	5 pcs.
N	Connector	1 pc.
0	Fixture Assembly	1 pc.
Р	Socket Collar	5 pcs.
Q	Bulb Shield	5 pcs.
R	G9 Bulb	5 pcs.
S	Socket Assembly	1 pc.
Т	Stem	1 pc.
U	Spacer Tube	1 pc.
V	Crystal	1 pc.
W	Finial	1 pc.

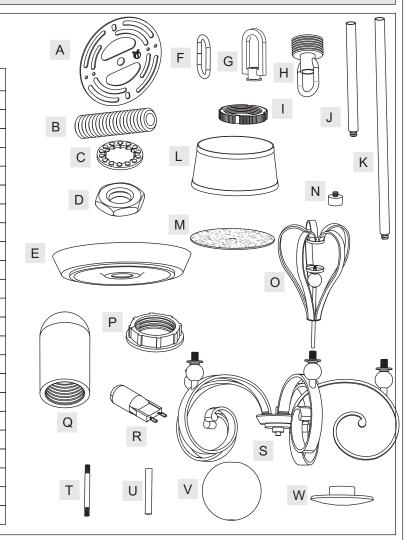


Q UOIZEL 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Assembly Instruction Sheet #IS-UPMM5005WT For Style UPMM5005WT


STEP 1 - Adjust Socket Assembly

A. Unfold support arms on Socket assembly to proper locations.

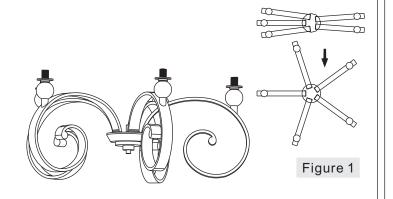


STEP 2 - Attach Crystal to Socket Assembly

- A. Screw the beaded end of the stem (T) into the coupling on the bottom center of the socket assembly (E). Hand tighten until snug.
- B. Pass the Spacer Tube (U) and the Crystal (V) over the end of the stem (F). Secure by threading the Finial (W) onto the stem (F). Hand tighten until snug.

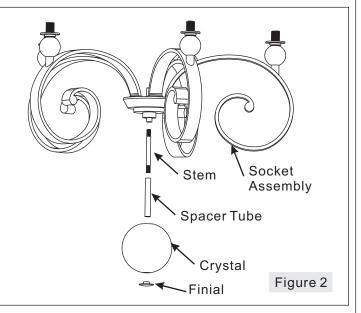

STEP 3 – Attach Fixture Assembly to Socket Assembly

- A. Thread the Fixture Assembly (O) onto the Hex Coupling on the top center of the Socket Assembly (S). Hand tighten until snug.
- B. Place the Hole of the Fixture Assembly (O) over the Nipple and secure with Connector (N). Hand tighten until snug.

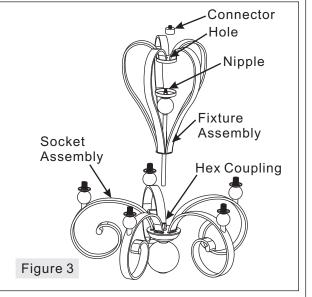


Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Assembly Instruction Sheet #IS-UPMM5005WT For Style UPMM5005WT


STEP 4- Assemble Rods

- A. Determine the Rods (J/K) to be assembled to the Fixture Assembly (O) according to your hanging height.
- B. Pass Supply Wires and Ground Wire through the chosen Rods (J/K) and then thread the chosen Rods (J/K) and the Fixture Assembly (O) together. Hand tighten until snug.

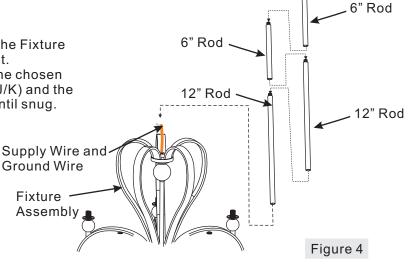


STEP 5 - Assemble Fixture Loop to Upper Rod

A. Pass Supply Wires and Ground Wire through the Fixture Loop (G) then thread the Fixture Loop (G) and the Upper Rod together. Hand tighten until snug.

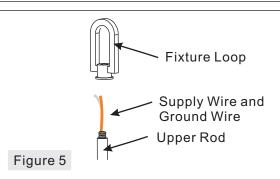


STEP 6 - Attach Crossbar to Outlet Box

A. Secure the Corssbar (A) to the outlet box with outlet box screws (not supplied). Tighten until snug.

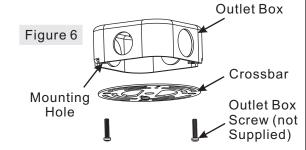

STEP 7 – Attach Nipple to Crossbar

- A. Thread one Hex Nut (D) onto the top end of the Nipple (B).
- B. Place one Lock Washer (C) over the top end of the Nipple (B) and then thread the Nipple (B) into the center lock hole of the Crossbar (A).
- C. Using pliers, thread the Hex Nut (D) against the Crossbar (A) and hand tighten until snug.

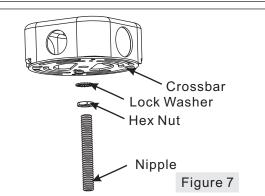

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com

December 2012


4of7

Q U O I Z E L 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Assembly Instruction Sheet #IS-UPMM5005WT For Style UPMM5005WT


STEP 8 - Attach Canopy Chain Loop to Nipple

- A. Thread another Hex Nut (D) onto the end of the Nipple (B).
- B. Place the Lock Washer (C) over the end of the Nipple (B) and then thread the Canopy Chain Loop (H) onto the end of the Nipple (B).
- C. Using pliers, thread the Hex Nut (D) against the Canopy Chain Loop (H) and hand tighten until snug.

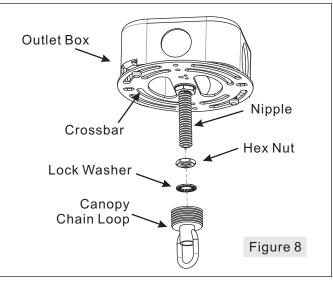


STEP 9 - Assemble Ceiling Canopy

A. Push the Ceiling Canopy (E) upward over the Outlet Box. Thread the Canopy Lock Ring (I) onto the Canopy Chain Loop (H) and tighten until snug to secure the Ceiling Canopy (E).

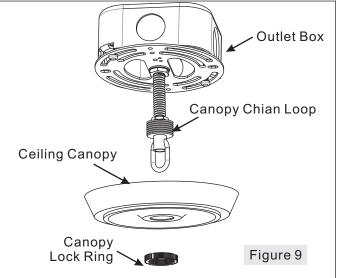

STEP 10 – Attach Fixture Chain to Canopy Chain Loop and Fixture Loop

A. Attach one end of the Fixture Chain (F) onto the Canopy Chain Loop (H) and then attach the other end of the Fixture Chain (F) onto the Fixture Loop on the top of the fixture.

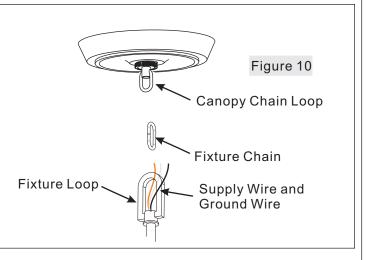

QUOIZEL 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Assembly Instruction Sheet #IS-UPMM5005WT For Style UPMM5005WT

Supply Wire


and Ground

Wire from

Outlet Box

STEP 11 - Pass Supply Wires through Fixture Chain

A. Pull the Supply Wires and Ground Wire up through the Fixture Chain (F) alternating links. Push the wires up through the Canopy Chain Loop (H) into the outlet box.

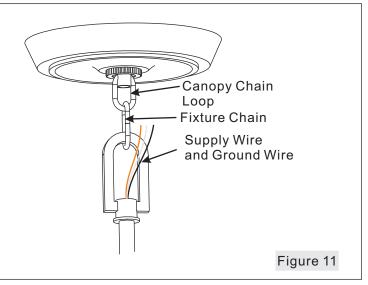

Supply Wire and


Loop

Ground Wire

Canopy Chain

STEP 12 - Make Wire Connections

- A. Un-thread the Canopy Lock Ring (I) and slide Canopy Lock Ring (I) and Ceiling Canopy (E) down the Fixture Chain.
- B. Push all slack fixture wire through Canopy Chain Loop into Outlet Box. Trim excess fixture wire leaving a minimum of 6 inch. Hanging out of the Outlet Box.
- C. Use standard wire connectors to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- D. Connect White Supply Wire from the Outlet Box to White Wire from fixture.
- Black Wire from fixture.

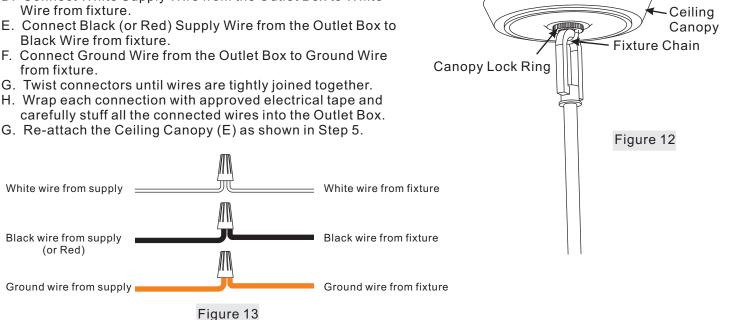




Assembly Instruction Sheet #IS-UPMM5005WT For Style UPMM5005WT

STEP 13 - Attach Shade to Fixture Body

- A. Place the Diffuser (M) over the Socket as shown.

 Thread the Socket Collar (P) onto the Socket to secure the Diffuser (M). Hand tighten until snug.
- B. Place the shade (L) over the Diffuser (M) properly.

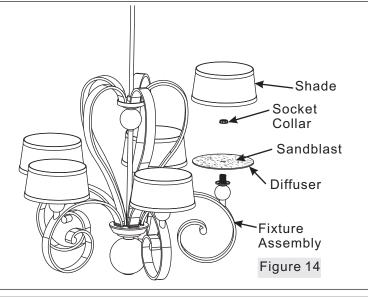


STEP 14 - Install Bulb and Bulb Shield

- A. This fixture uses Frosted G9 Halogen Bulbs. Maximum 75 watts.
- B. Insert bulb and seat properly into place.
- C. Screw Bulb Shield (Q) onto the Socket and hand tighten until snug.

IMPORTANT: Do not touch the bulb with bare hands use a cloth or glove.

Your lamp wall fixture is now assembled and ready to use. Enjoy!

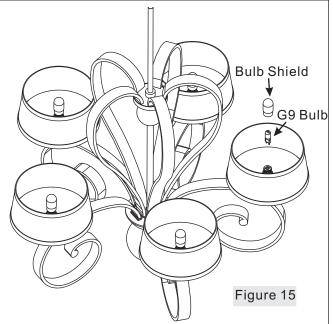

CAUTION FOR BULB REPLACING

- A. When replace bulb, turn off power and allow lamp to cool. For safety purpose, wear gloves and eye protection.
- B. If bulb is scratched or cracked, DO NOT use the lamp to avoid breakage during use or installation.
- C. Use only in fixtures rated for lamps wattage and voltage.
- D. Lamp operate under high pressure generating intense heat. Prevent contact with liquid and combustible materials.

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at www.quoizel.com

c 2012 Quoizel Inc. December 2012