

access
LIGHTING



INSTALLATION INSTRUCTIONS

IMPORTANT

Before assembling your ACCESS LIGHTING fixture, please make sure that you carefully read through this instruction sheet. Save this instruction sheet and refer to it when additions to or changes in the fixture configuration are made.

Enregistrer cette feuille d'instructions et de s'y référer lorsque les ajouts ou changements dans la configuration de montage sont faites

Consider having your fixture installed by a qualified licensed electrician.


NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that can't be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture

GENERAL INFORMATION

All electrical connections must be in accordance with all ordinances, Local and National Electrical Codes. These fixtures are intended for mounting to standard 4" x 2 1/2" metal octagon outlet box. The box must be directly supported by the building structure and U.L. Recognized

STEP-BY-STEP INSTRUCTIONS

Before starting your installation disconnect the Power by turning off the Circuit Breaker or by removing the fuse at the fuse box. Just turning the light off at the light switch is not sufficient to prevent electrical shock.

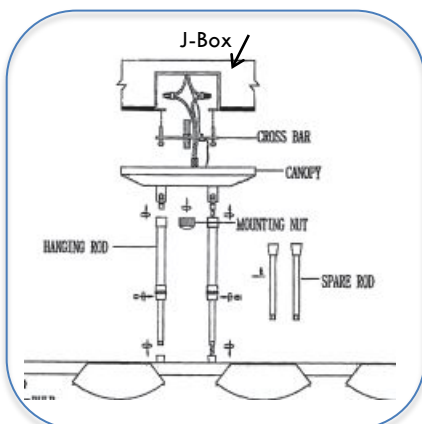

COLLECTION
Nido

APPLICATION
Ceiling Pendant

MODEL NO.
63959

IMPORTANT SAFETY INSTRUCTION

MESURES DE SECURITE A RESPECTER

Consult a qualified electrician to ensure correct branch circuit conductor.

Consulter un electricien qualifie pour vous assurer que les conducteurs de la derivation sont adequats

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Ce produit doit etre installe selon le code d'installation pertinent, par une personne qui connait bien le produit et son fonctionnement ainsi que les risques inherents

Do not install this fixture in hazardous locations.

N'installez pas cet appareil dans des emplacements dangereux

Do not install fixture assembly closer than 6 inches from any curtain or similar combustible material.

Laisser une distance d'au moins 6 pouces entre ce luminaire et la toute surface combustible.

WARNING: Risk of Fire and Electric Shock

CAUTION: Risque d' Incendie et de Choc Electriques

WHAT WE PROVIDE

- Fixture Assembly
- Crossbar
- Fixture Canopy
- Mounting Hardware
- 3,4,5 Glass Shades (Model dependent)
- 3,4,5 x 100W HGN/J78mm Bulb (Model dependent)

WHAT YOU NEED


- Screwdriver
- Wire Cutters
- Wiring Supplies as Specified by the Electrical Code

PREPARE FIXTURE

If there is an existing fixture remove it. Expose the supply wires from the outlet box.

Loosen the Knurled Thumb Nuts located on the Rods and fully extend the fixture Rods. Re-tighten the nuts ensuring that the Rods are secure. Mount the supplied Crossbar set to the J-Box using the supplied Screws. Insert the supplied Nipple into the Crossbar. Feed the Fixture wires through the holes in the Canopy and then secure the top of the fixture Rod to the Canopy by screwing onto the threaded rods attached to the Canopy.

Supply Wires from outlet box

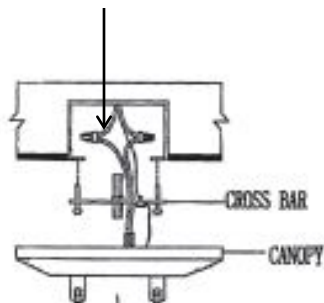


2

CONNECT THE WIRES

Connect the black supply wire to the black fixture wire. Secure with the supplied wire nuts. Connect the white supply wires to the fixture wire. Secure with the supplied wire nuts. Either wrap the outlet box grounding (green) wire around the green hexagonal screw provided on the mounting plate or connect it to the supply ground wire provided with the fixture. Secure all wires with U.L. Certified electrical tape (not supplied).


Tuck all wires carefully into the J-box.

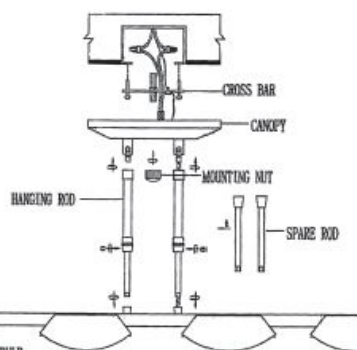

3

MOUNT THE CANOPY

Place the Canopy over the Crossbar. Place the Nipple through the hole in the fixture Canopy and screw the supplied brass nut onto the nipple. Ensure that the brass nut is very secure. Determine the desired length of the fixture; loosen the knurled thumb nuts, located on the rods of the fixture. Once the desired length has been determined, tighten the Knurled Thumb Nuts so that the rods remain secured.

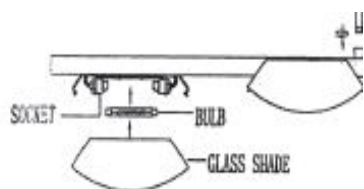

4

SECURE THE GLASS SHADE AND INSERT THE BULB

Slide the Glass Shades over the Sockets and secure with the supplied Glass Retaining Rings. Insert the supplied Bulbs.

DO NOT exceed the wattage as indicated on the warning label.



5

RESTORE THE ELECTRICITY AND CHECK THE OPERATION OF YOUR NEW ACCESS LIGHTING FIXTURE**CAUTION**

Please ensure that the fitting is cool and switched off before replacing the bulb. DO NOT use bulbs that might exceed the maximum wattage as stated on caution label.