



assembly instructions


Family: Veranda | Item No. 4807 SU

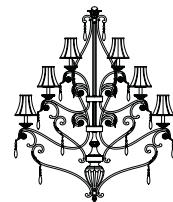

Drawing 1 - Fixture Assembly

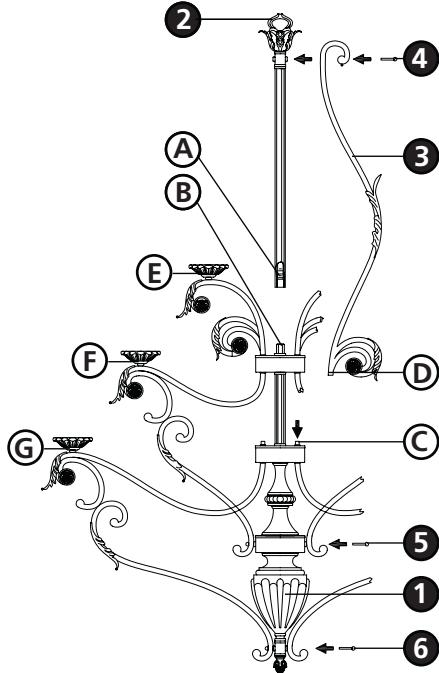

Drawing 2 - Fixture Assembly

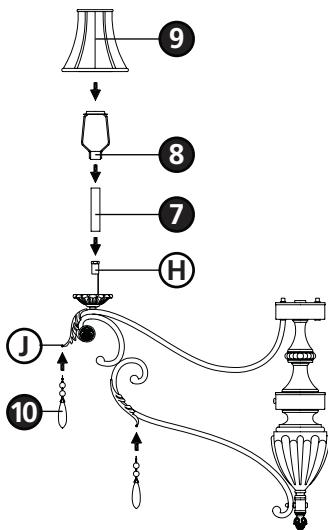

1

- Find a clear area in which you can work.
- Unpack fixture and glass from carton.
- Carefully review instructions prior to assembly.

**** The construction of this fixture will be accomplished by first partially assembling the main body of the fixture, installing the required mounting braces, mounting the mounting strap to the junction box, making all necessary electrical connections, and then hanging the fixture from the ceiling, and then completing the assembly of the main fixture.*

2

SAFETY WARNING: READ WIRING AND GROUNDING INSTRUCTIONS (I.S. 18) AND ANY ADDITIONAL DIRECTIONS. TURN POWER SUPPLY OFF DURING INSTALLATION. IF NEW WIRING IS REQUIRED, CONSULT A QUALIFIED ELECTRICIAN OR LOCAL AUTHORITIES FOR CODE REQUIREMENTS.

3

- Thread nipple (A) of center column assembly (2) into coupler (B), located on the top of the main body assembly (1) - see Drawing 1.
- Starting with the top 3 arms (E) and spread them apart so they are evenly spaced 120 degrees apart.
- Spread arms (F) of the second tier apart until they are equally spaced 60 degrees apart, and are positioned, so that every other arm is between the top tier arms (E).
- Attach the bottom of arm (F) to the main fixture body (1) using the ball knob screws (5).
- The bottom tier arms (G) are to be spread so they are equally spaced 60 degrees apart and each arm is spaced evenly between the arms of the second tier (F).
- Attach the bottom of arms (G) to the main fixture body (1) using the ball knob screws (6).
- Attach uprights (3) to fixture by placing end (D) over peg (C) and attaching top to center column assembly (2) using ball knob studs (4) provided. Repeat for remaining uprights.
- Please refer to I.S. 19-50 to properly hang fixture from ceiling and continue installation of this fixture. This fixture is over 50 lbs when fully assembled. In order to be U.L. compliant, additional support in the ceiling is required.

1. Slip the candle sleeve (7) over the socket (H) - see Drawing 2.

2. Slip shade harp (8) over top of candle sleeve.

3. Set shade (9) on top of shade harp (8).


4. Crystal penatlogs (10) are attached to the by clipping them onto the small loops provided (J).



I.S. 19-50 hanging instructions

Hanging instructions for 3 tier fixture under 50 lbs.

Drawing 1 - Fixture Assembly

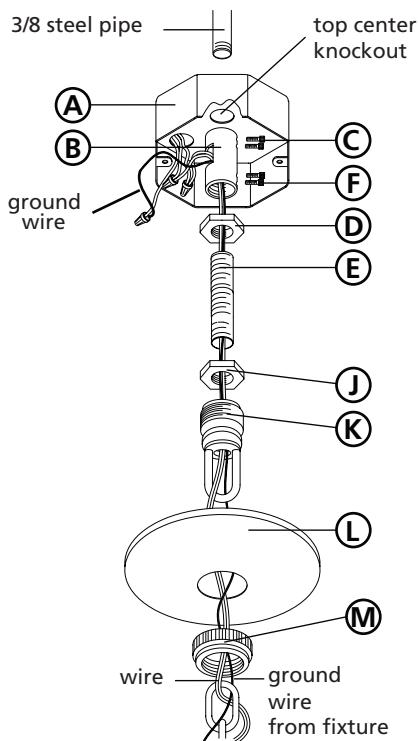

start here

1

1. Shut off electrical current before starting. If the fixture you are replacing is turned on and off by a wall switch, simply turn the switch off. If not, remove the appropriate fuse (or open the circuit breakers) until the fixture is dead.

• DO NOT RESTORE CURRENT - EITHER BY FUSE, BREAKER, OR SWITCH - UNTIL THE NEW FIXTURE IS COMPLETELY WIRED AND IN PLACE.

2. Supply wires shall enter the outlet box (A) through any knockout EXCEPT the top center knockout - see **Drawing 1**.

2

1. Fixture is to be mounted by a 3/8 steel pipe with 3/8 -18 NPSM thread, 3/4" threads at both ends (not supplied). Pipe should be anchored to structure or bridging member with sufficient strength to support 4 times the fixtures weight - see **Drawing 2**.

2. Adjust pipe so 1/2" of 3/8 steel pipe extends into the junction box, at the center knock out.

3

1. Thread pipe coupler (B) onto protruding pipe inside outlet box. Secure in place by tightening allen head screw (C) - see **Drawing 1**.

2. Thread hexnut (D) onto threaded nipple (E). Thread nipple (E) into coupler (B). Secure in place by tightening hexnut (D) against coupler (B) and then tightening allen screw (F).

3. Thread hexnut (J) onto nipple (E). DO NOT tighten hexnuts (J) at this time.

4. Thread screw collar loop (K). Adjust loop height so the half of the exterior thread on screw collar loop (K) is exposed when canopy (L) is held up to the ceiling.

4

1. Determine length of chain you will require. Attach one end of length of chain to fixture.

2. Slip threaded ring (M) and canopy (L) onto chain - see **Drawing 1**.


3. Attach fixture with chain to screw collar loop (K). Please get assistance, weight and size of fixture is difficult to manage alone.

4. Weave ground wire, and supply wire, through chain, up through center of screw collar loop (K), through center of nipple (E), and out the opening on the side of coupler (B).

5. Make electrical connections from supply wire to fixture lead wires. Refer to instruction sheet (**I.S. 18**) and follow all instructions to make all necessary wiring connections

6. After connections are made slip wires into junction box. Slip canopy along chain and up to ceiling. Thread thread ring (M) onto loop and tighten to secure canopy to ceiling.


Drawing 2 - Installation Example

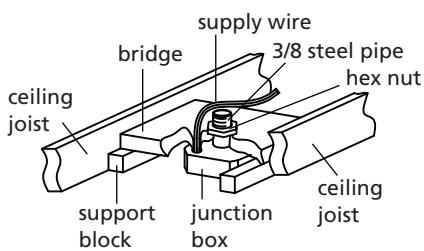




I.S. 18 wiring | grounding instructions


Drawing 1 - Flush Mount

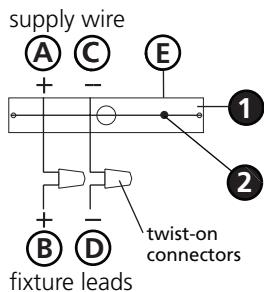

Drawing 2 - Chain Hung

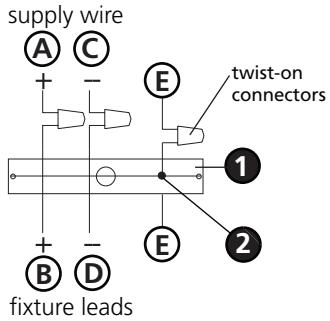

Drawing 3 - Post-Mount

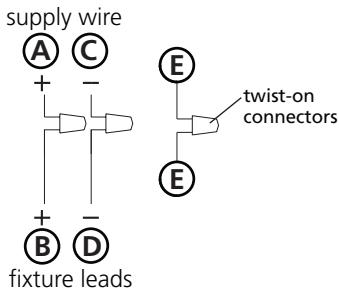

SAFETY WARNING: READ WIRING AND GROUNDING INSTRUCTIONS (I.S. 18) AND ANY ADDITIONAL DIRECTIONS. TURN POWER SUPPLY OFF DURING INSTALLATION. IF NEW WIRING IS REQUIRED, CONSULT A QUALIFIED ELECTRICIAN OR LOCAL AUTHORITIES FOR CODE REQUIREMENTS.

wiring instructions

Indoor Fixtures

1. Connect positive supply wire (**A**) (typically black or the smooth, unmarked side of the two-conductor cord) to positive fixture lead (**B**) with appropriately sized twist-on connector - see **Drawings 1 or 2**.
2. Connect negative supply wire (**C**) (typically white or the ribbed, marked side of the two-conductor cord) to negative fixture lead (**D**).
3. Please refer to the **grounding instructions** below to complete all electrical connections.

Outdoor Fixtures

1. Connect positive supply wire (**A**) (typically black or the smooth unmarked side of the two-conductor cord) to positive fixture lead (**B**) with appropriately sized twist-on connector - see **Drawings 2 or 3**.
2. Connect negative supply wire (**C**) (typically white or the ribbed, marked side of the two-conductor cord) to negative fixture lead (**D**).
3. Cover open end of connectors with silicone sealant to form a watertight seal.
 - If installing a wall mount fixture, use caulk to seal gaps between the fixture mounting plate (backplate) and the wall. This will help prevent water from entering the outlet box. If the wall surface is lap siding, use caulk and a fixture mounting platform specially.
4. Please refer to the **grounding instructions** below to complete all electrical connections.

grounding instructions

Flush Mount Fixtures

For positive grounding in a 3-wire electrical system, fasten the fixture ground wire (**E**) (typically copper or green plastic coated) to the fixture mounting strap (**1**) with the ground screw (**2**) - see **Drawing 1**.

Note: On straps for screw supported fixtures, first install the two mounting screws in strap. Any remaining tapped hole may be used for the ground screw.

Chain Hung Fixtures

Loop fixture ground wire (**E**) (typically copper or green plastic coated) under the head of the ground screw (**2**) on fixture mounting strap (**1**) and connect to the loose end of the fixture ground wire directly to the ground wire of the building system with appropriately sized twist-on connectors - see **Drawing 2**.

Post-Mount Fixtures

Connect fixture ground wire (**E**) (typically copper or green plastic coated) to power supply ground with appropriately sized twist-on connector inside post. Cover open end of connector with silicone sealant to form a watertight seal - see **Drawing 3**.